


Sorbus

Wall light

MODEL: NF-8944896639028

DESIGN DRAWING

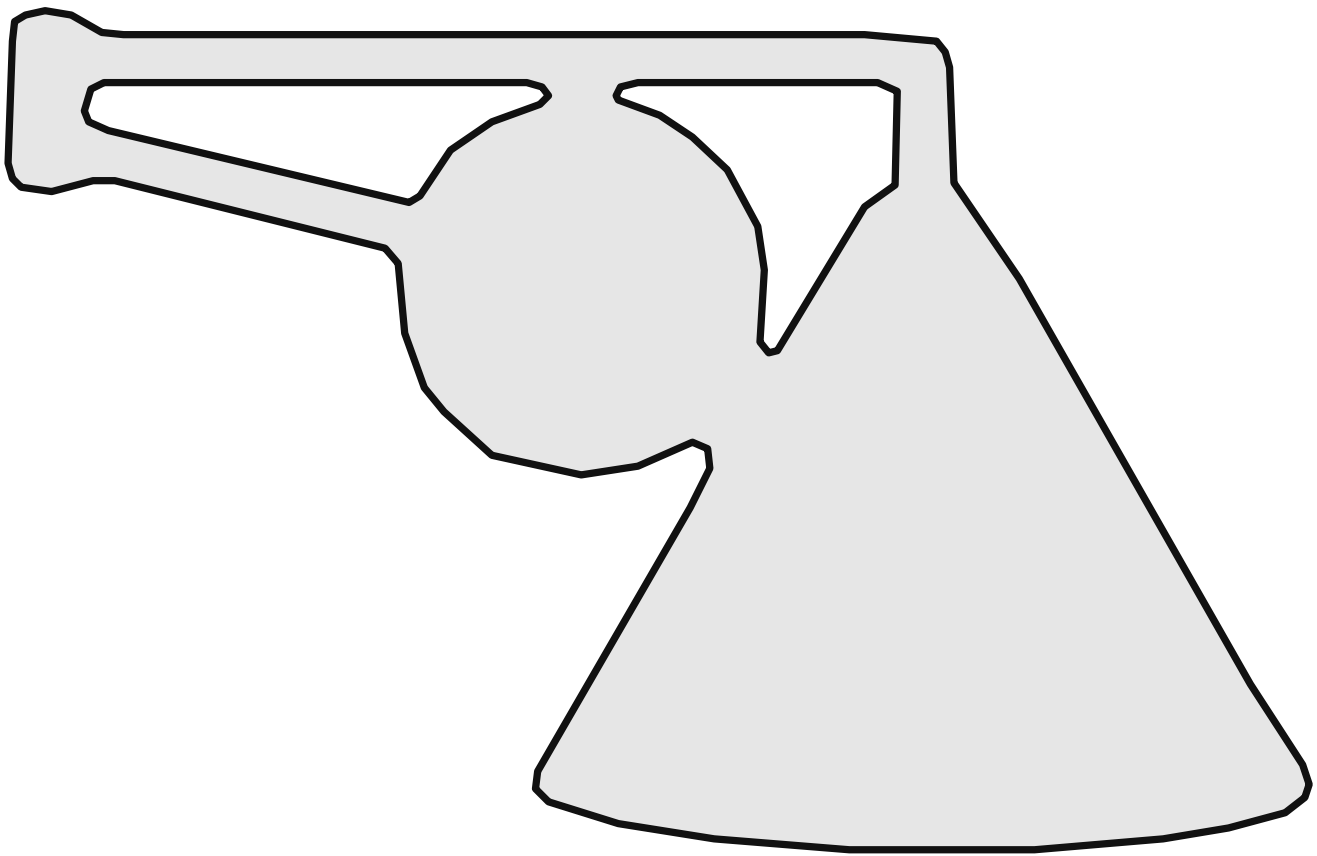

Shade 7.1 inches across, 5.5 inches high; Arm 9.1 plus 9.1 inches; backplate 3.9 inches



Read all instructions before you start, and keep them for future reference.

**Installation precautions**

1. Turn off the power at the breaker before you start, and check the wires are dead with a voltage tester.
2. If you are not sure how to wire it, have a licensed electrician do it. Follow local electrical codes.
3. Make sure the ceiling or wall box can carry the weight of the fixture.
4. Wear gloves so the finish stays clean.

Tools needed

Phillips screwdriver



Wire stripper



Voltage tester




Step ladder



E27 bulbs (not included)

Parts list

CHECK ALL PARTS BEFORE YOU START

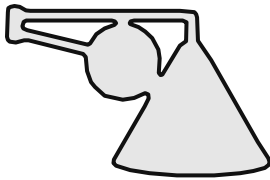A**x1**

Wall light

B**x1 set**


Mounting plate and screws

Wiring

	Wire	House supply	Fixture
L	Live (hot)	black	black or marked wire
N	Neutral	white	white or ribbed wire
G	Ground	green or bare copper	green or green-yellow

Join each pair with wire connectors. Connect ground to the green screw on the bracket or plate if there is one.

Exploded view

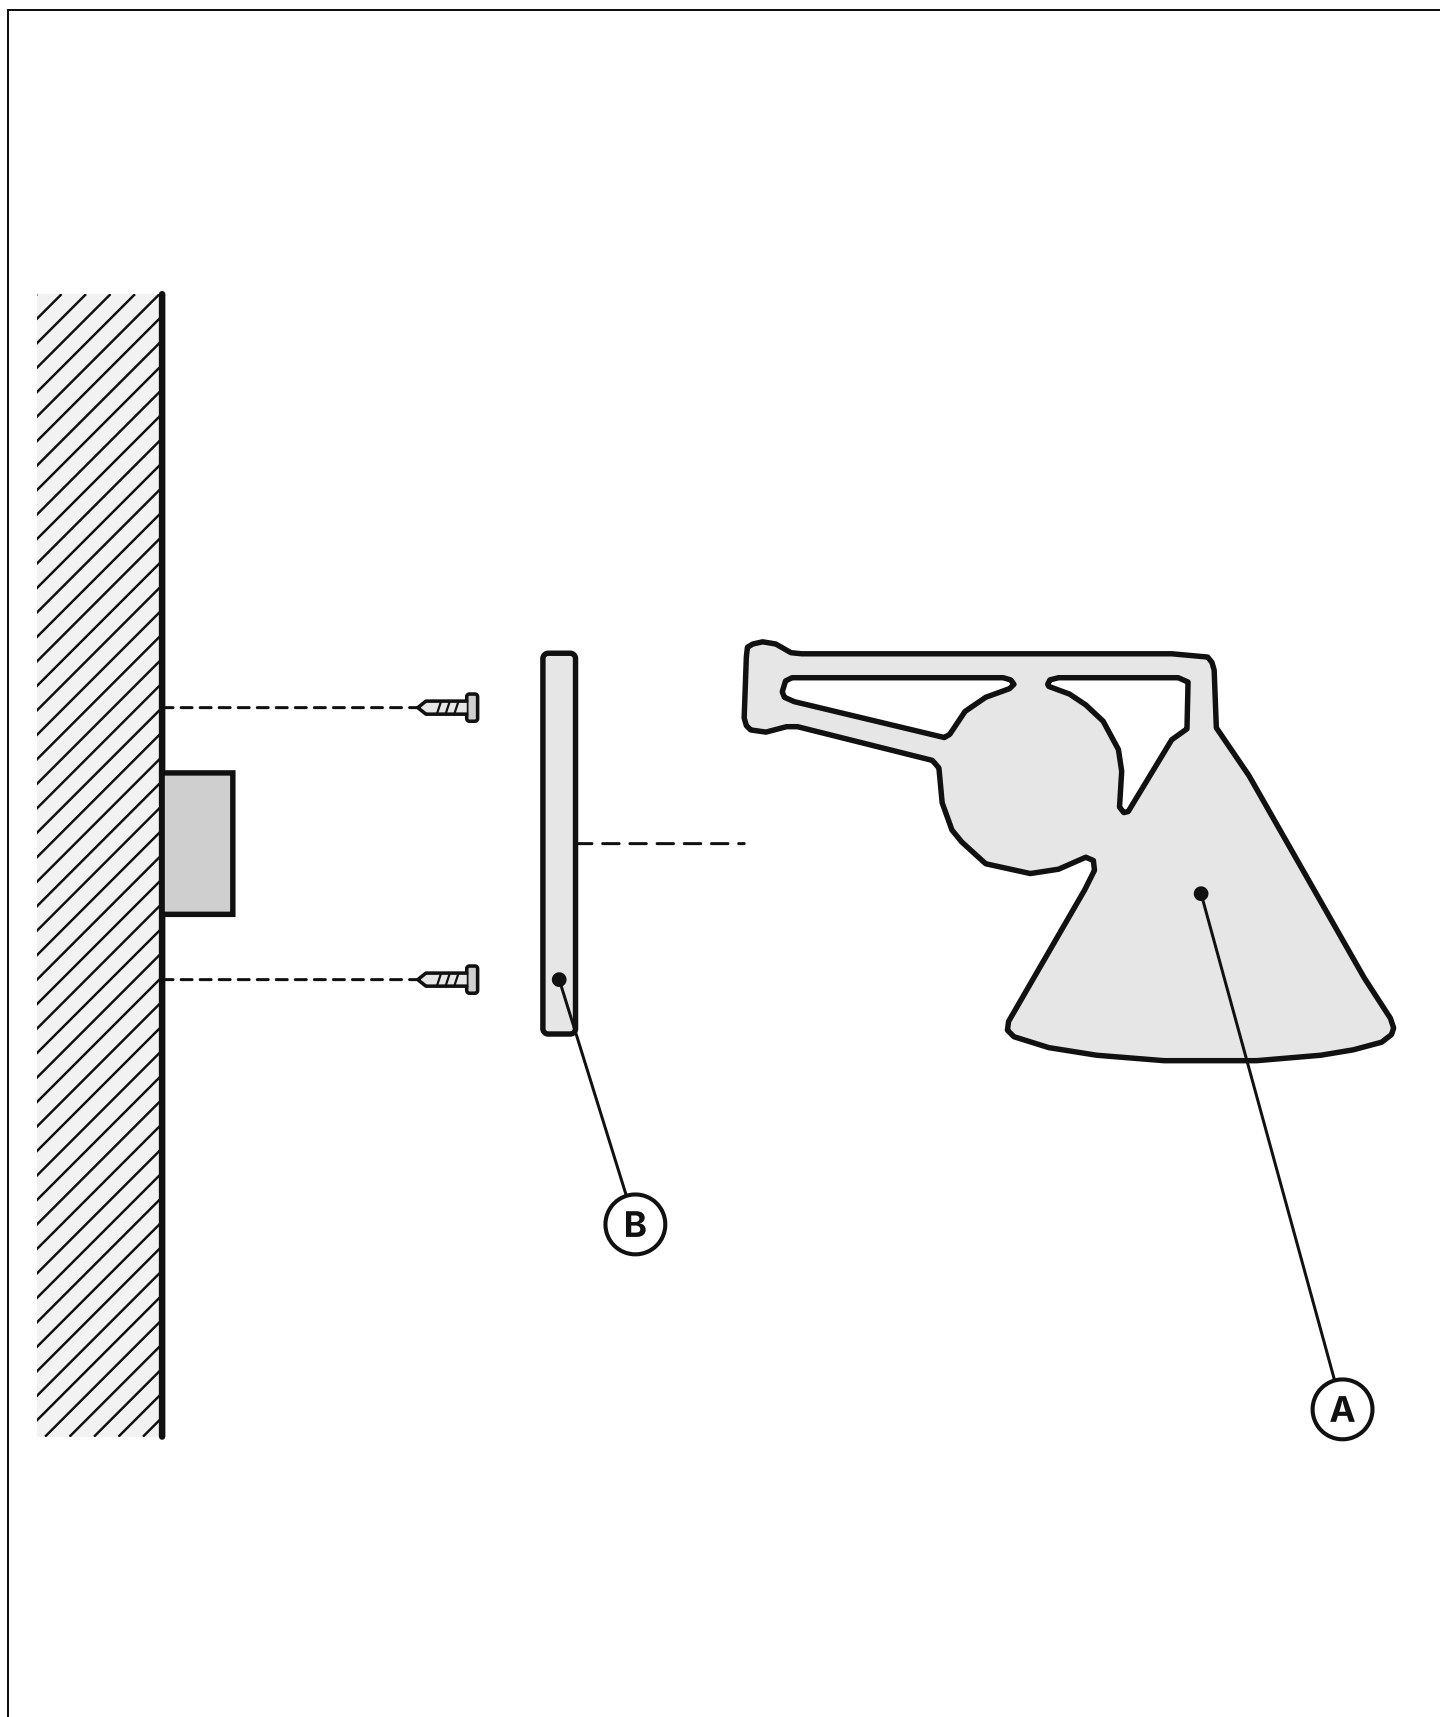


A Wall light ×1

B Mounting plate and screws ×1 set

Installation

STEPS 1-5 OF 5

1

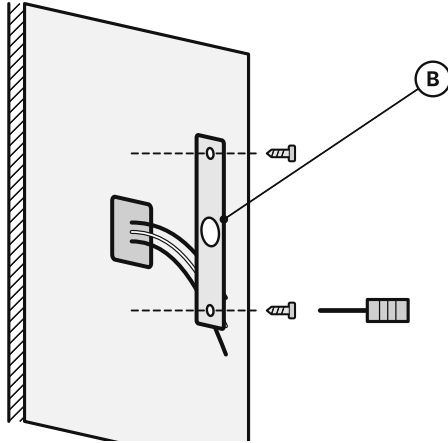


Fix the mounting plate (B) to the wall box with its screws.

2


House supply

- L** Live (hot)
black
- N** Neutral
white
- G** Ground
green or bare

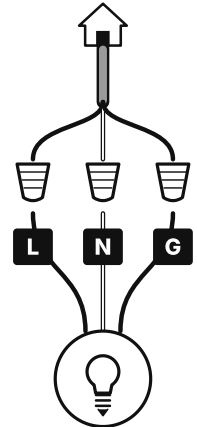


Connect the wires: L to L, N to N, G to G, with wire connectors.

3

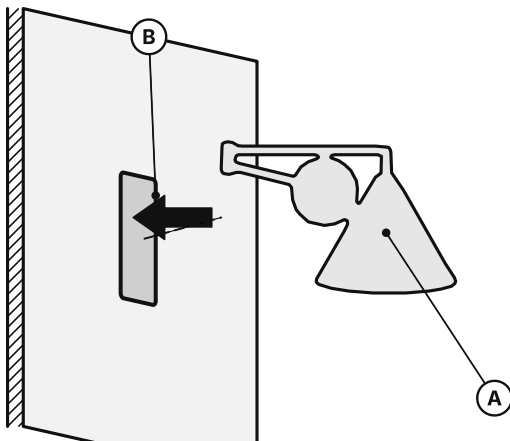

Fit the light (A) onto the plate and secure it.


4

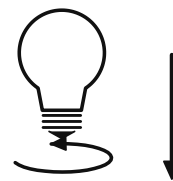

E27 bulb, not included

Fit the bulb.

5

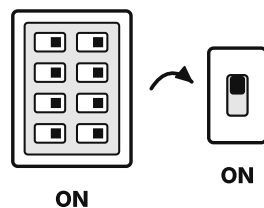

Turn the breaker on and switch on.

Care

- Wipe clean with a soft, dry cloth.
- Do not use abrasive cleaners on the wood grain finish.
- Switch the power off at the wall before cleaning or changing the bulb.

Troubleshooting

Problem	What to do
Light does not come on	Check the breaker and wall switch. Turn the power off and check each wire connection is tight.
Light flickers	Turn the power off and re-make the connections. On a dimmable model, use an LED-rated dimmer.
Fixture sits crooked	Loosen the mounting screws, level the bracket and retighten.

Need help?

Email info@norafurnish.com with your order number and a photo. A part missing or damaged? We will send a new one.

NoraFurnish