


Feuille

Ceiling light

MODEL: DZ3KN4S0

DESIGN DRAWING

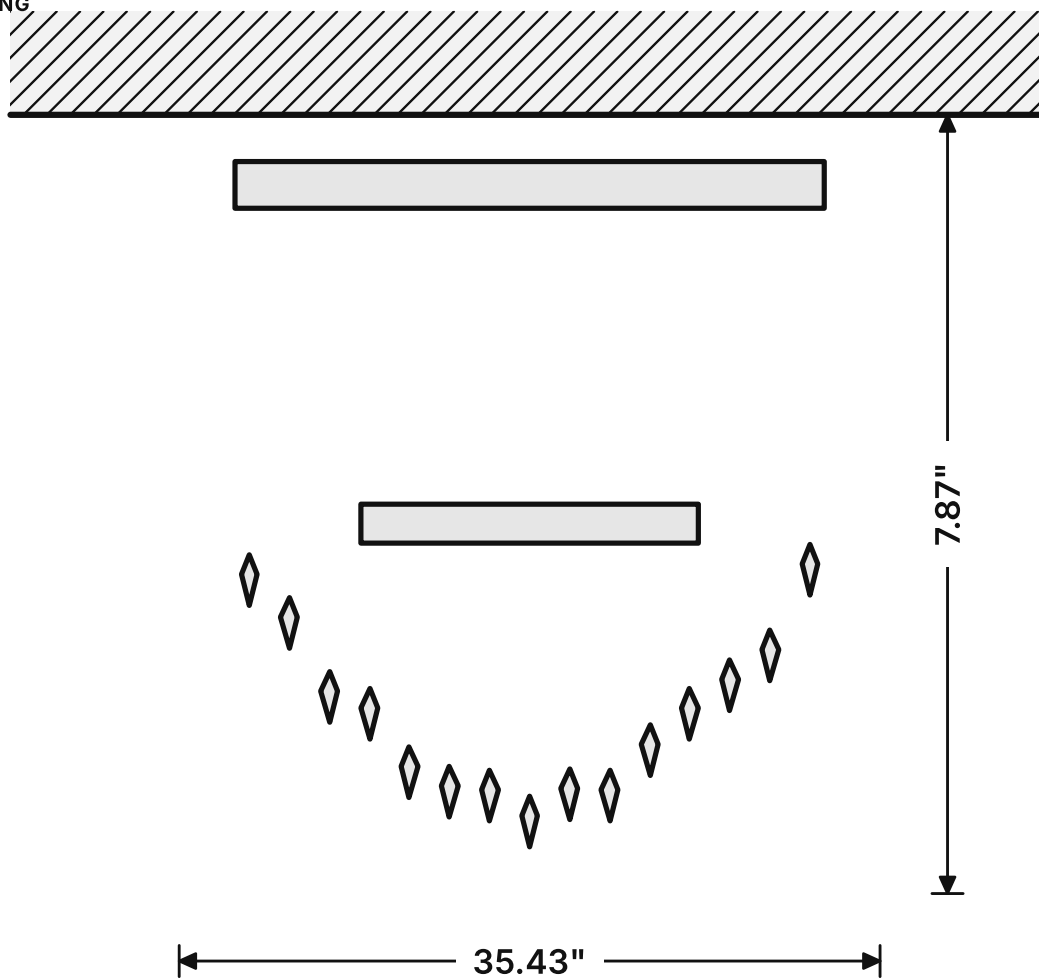

Read all instructions before you start, and keep them for future reference.



Installation precautions

1. Turn off the power at the breaker before you start, and check the wires are dead with a voltage tester.
2. If you are not sure how to wire it, have a licensed electrician do it. Follow local electrical codes.
3. Make sure the ceiling or wall box can carry the weight of the fixture.
4. Wear gloves so the finish stays clean.

Tools needed



Phillips screwdriver



Wire stripper




Voltage tester



Step ladder

Parts list

CHECK ALL PARTS BEFORE YOU START

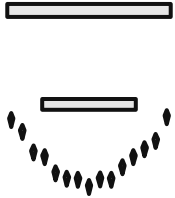
A x1  Ceiling light	B x1 set  Mounting bracket and screws	C x1 set  G4 bulbs
--	--	--

Wiring

	Wire	House supply	Fixture
L	Live (hot)	black	black or marked wire
N	Neutral	white	white or ribbed wire
G	Ground	green or bare copper	green or green-yellow

Join each pair with wire connectors. Connect ground to the green screw on the bracket or plate if there is one.


Exploded view

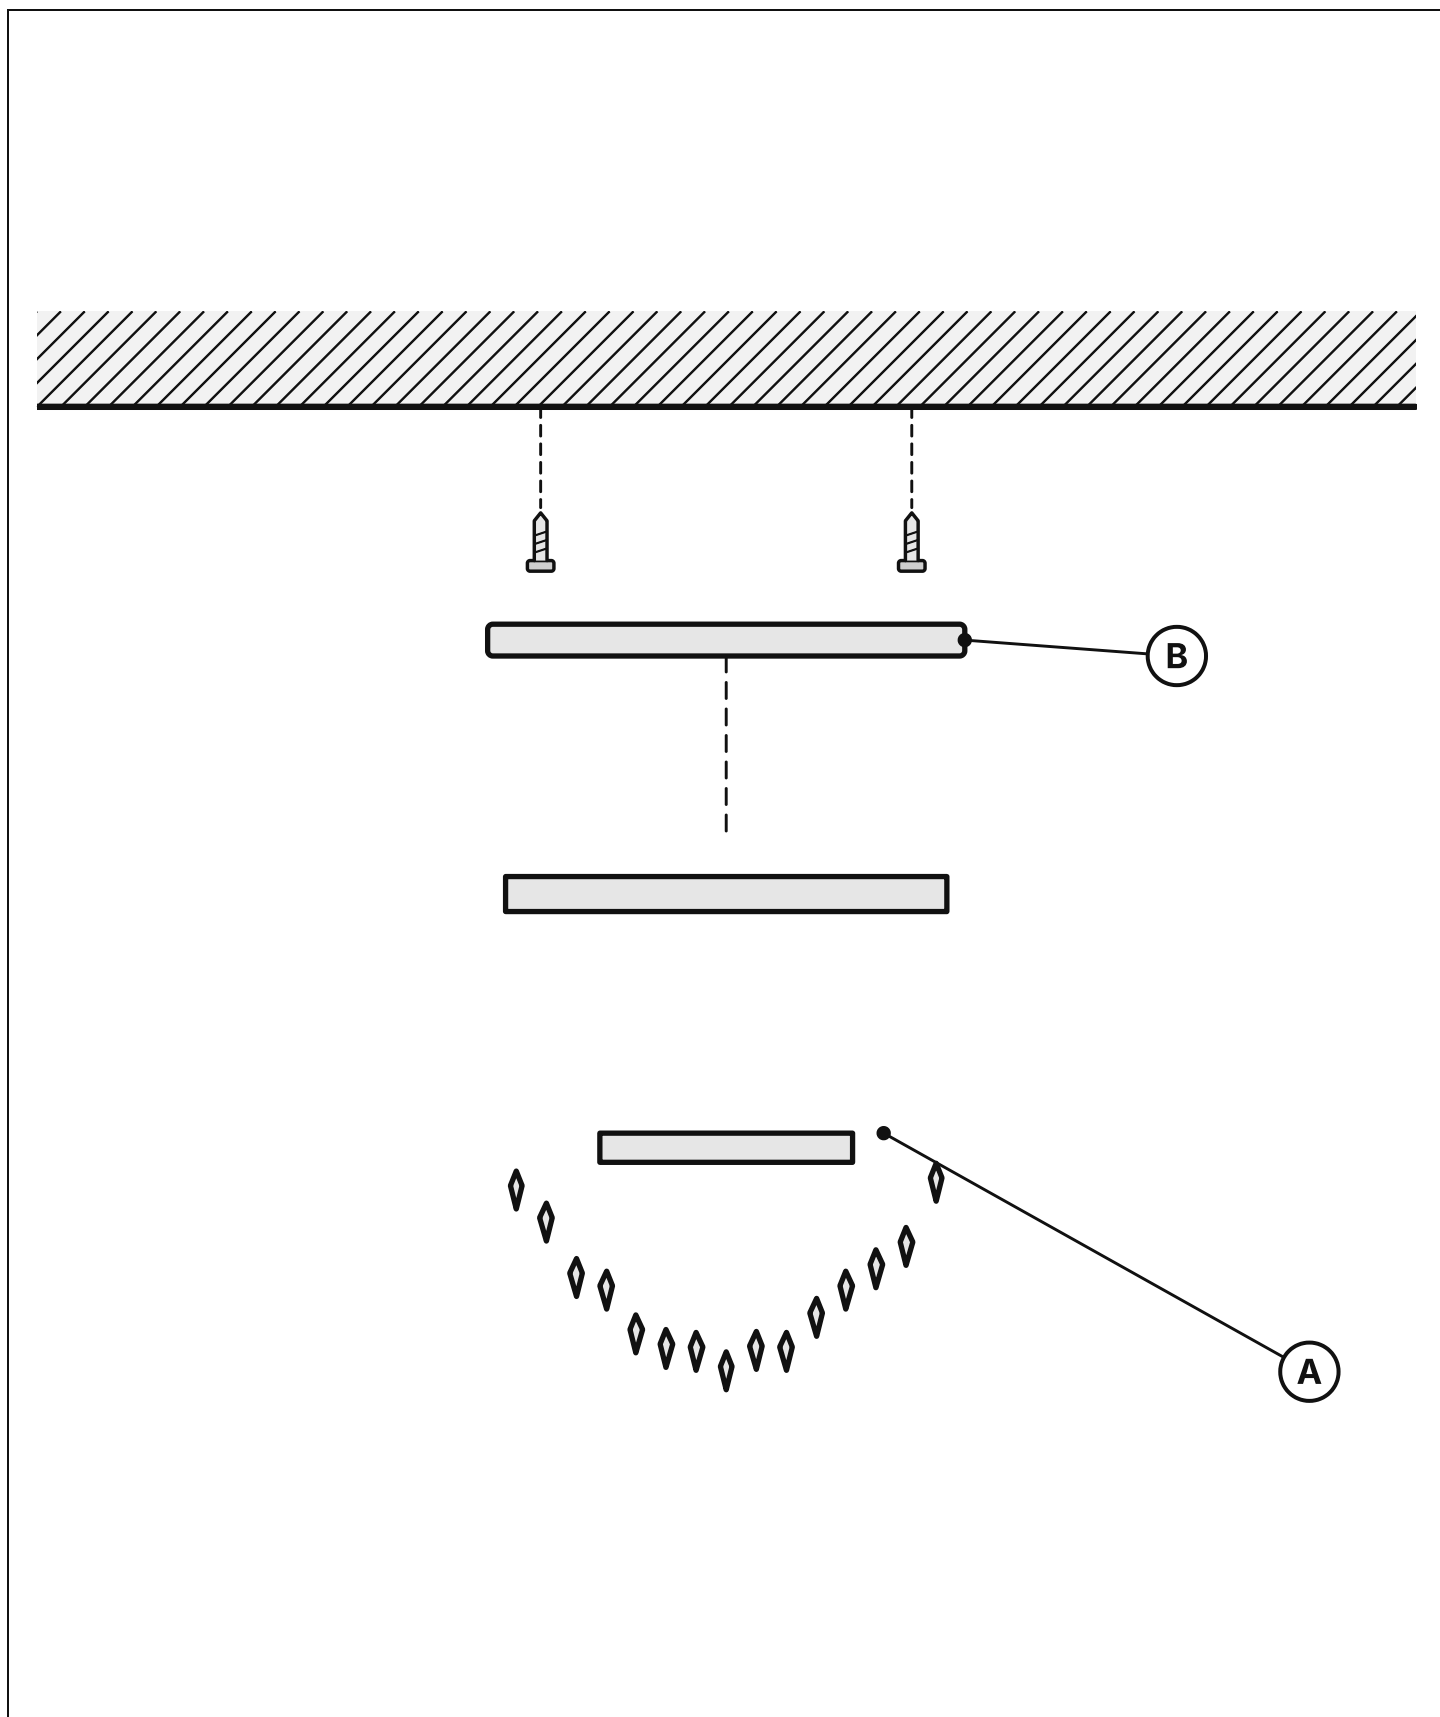**A** Ceiling light ×1**B** Mounting bracket and screws ×1 set**C** G4 bulbs ×1 set

Installation

STEPS 1-5 OF 5

1

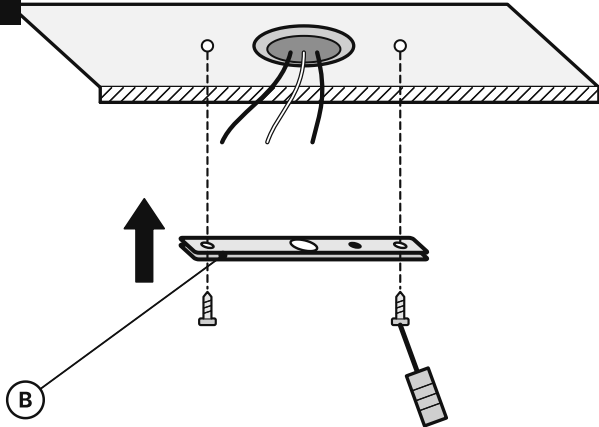


Fix the mounting bracket (B) to the ceiling box with its screws.

2


House supply

- L** Live (hot)
black
- N** Neutral
white
- G** Ground
green or bare

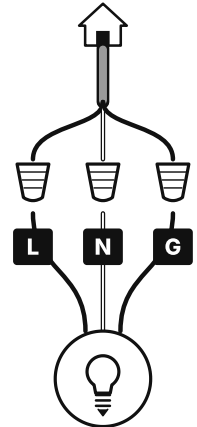


Connect the wires: L to L, N to N, G to G, with wire connectors.

3

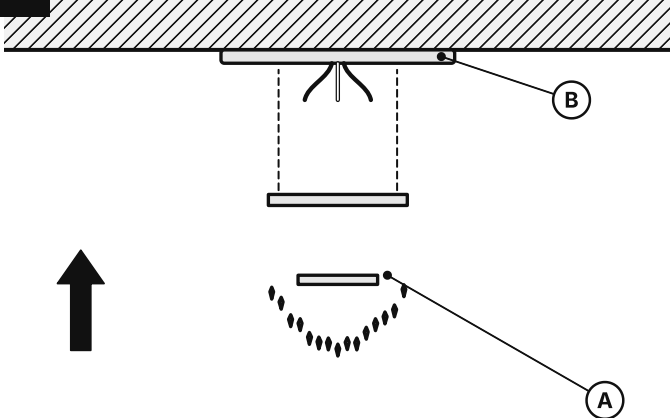

Lift the light (A) onto the bracket and secure it.


4

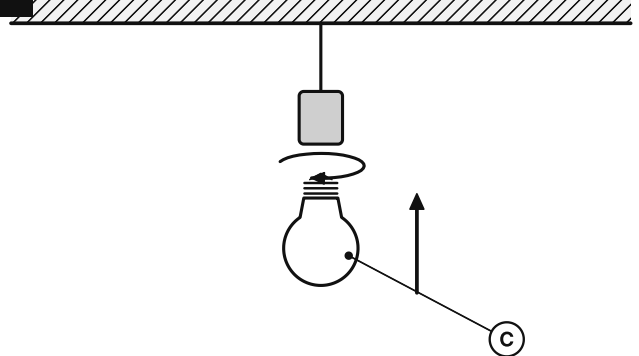

G4 bulb, included

Fit the bulbs (C), then the shade or diffuser if it has one.

5

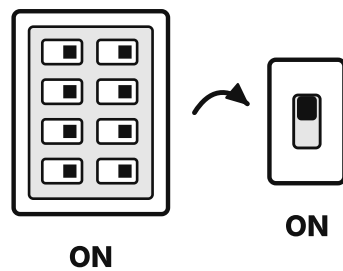

Turn the breaker on and switch on.

Care

- Wipe clean with a soft, dry cloth.
- Clean glass or acrylic with a soft damp cloth and dry it straight away.
- Do not use abrasive cleaners.

Troubleshooting

Problem	What to do
Light does not come on	Check the breaker and wall switch. Turn the power off and check each wire connection is tight.
Light flickers	Turn the power off and re-make the connections. On a dimmable model, use an LED-rated dimmer.
Fixture sits crooked	Loosen the mounting screws, level the bracket and retighten.

Need help?

Email info@norafurnish.com with your order number and a photo. A part missing or damaged? We will send a new one.

NoraFurnish