


Cilindro

Outdoor post and path light

MODEL: LI000952-0

DESIGN DRAWING

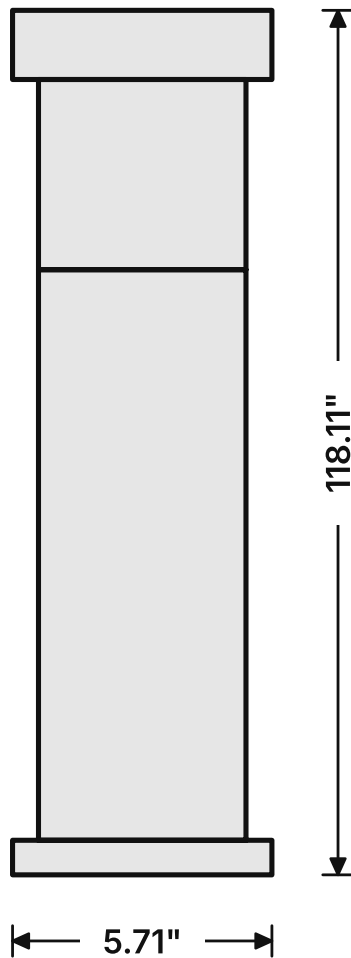

Shown: 118"



Read all instructions before you start, and keep them for future reference.



Installation precautions

1. Turn off the power at the breaker before you start, and check the wires are dead with a voltage tester.
2. If you are not sure how to wire it, have a licensed electrician do it. Follow local electrical codes.
3. Fix the light only to a solid, level base.
4. For outdoor use, keep every connection inside a weatherproof box.

Tools needed



Phillips screwdriver



Wire stripper



Voltage tester



Step ladder



 
Drill

Parts list

CHECK ALL PARTS BEFORE YOU START

A


×1



Outdoor light

B

×1 set

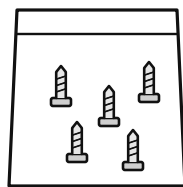


Mounting screws and anchors

Wiring

	Wire	House supply	Fixture
L	Live (hot)	black	black or marked wire
N	Neutral	white	white or ribbed wire
G	Ground	green or bare copper	green or green-yellow

Join each pair with wire connectors. Connect ground to the green screw on the bracket or plate if there is one.

Exploded view

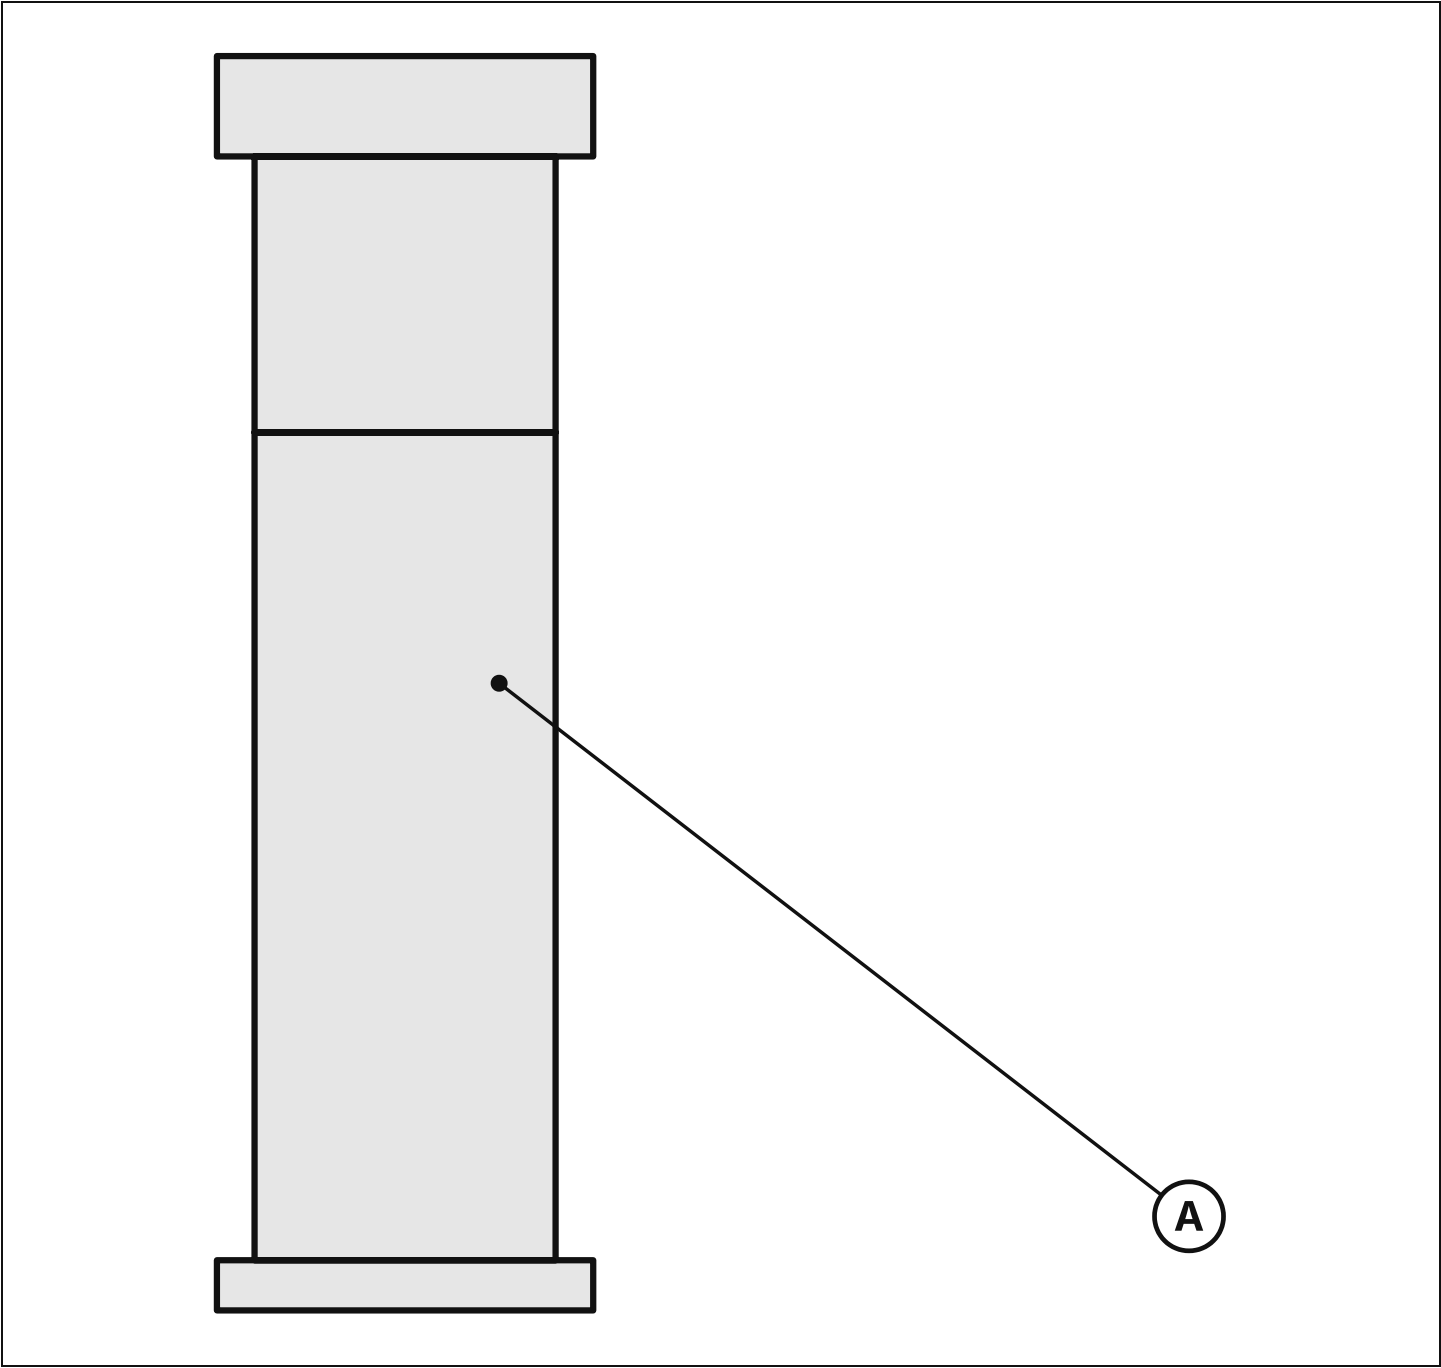


- A** Outdoor light ×1
- B** Mounting screws and anchors ×1 set

Size	Diameter	Height
118"	5.71"	118.11"
138"	5.71"	137.80"
31"	5.91"	31.50"
59"	5.71"	59.06"
79"	5.71"	78.74"
98"	5.71"	98.43"

Installation

STEPS 1-4 OF 4


1

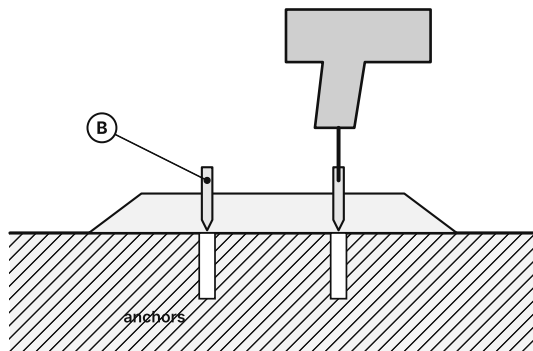

Mark the fixing holes on a solid, level base. Drill them and fit the anchors (B).


2

House supply
L Live (hot)
 black
N Neutral
 white
G Ground
 green or bare

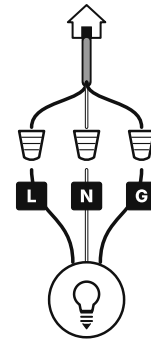



Connect the wires in a weatherproof box: L to L, N to N, G to G.

3

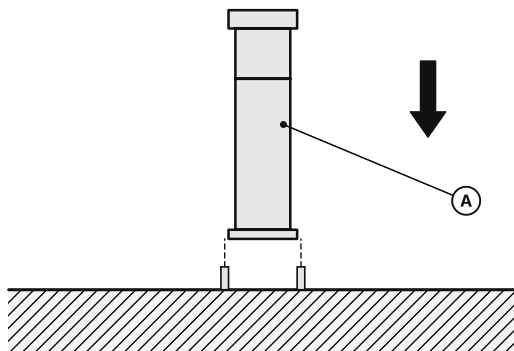

Fix the light (A) to its base with the screws.

4

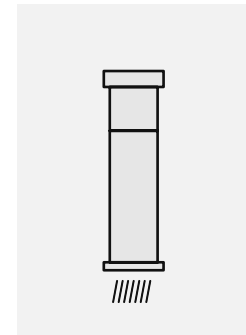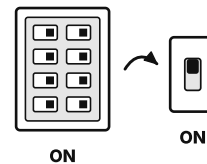

Turn the breaker on and switch on.

Care

- Wipe clean with a soft, dry cloth.
- Switch the fixture off and let it cool before cleaning.

Troubleshooting

Problem	What to do
Light does not come on	Check the breaker and wall switch. Turn the power off and check each wire connection is tight.
Light flickers	Turn the power off and re-make the connections. On a dimmable model, use an LED-rated dimmer.
Fixture is not level	Loosen the mounting screws, level the base and retighten.

Need help?

Email info@norafurnish.com with your order number and a photo. A part missing or damaged? We will send a new one.

NoraFurnish