


Asken

Ceiling fan

MODEL: LI000587-0

DESIGN DRAWING

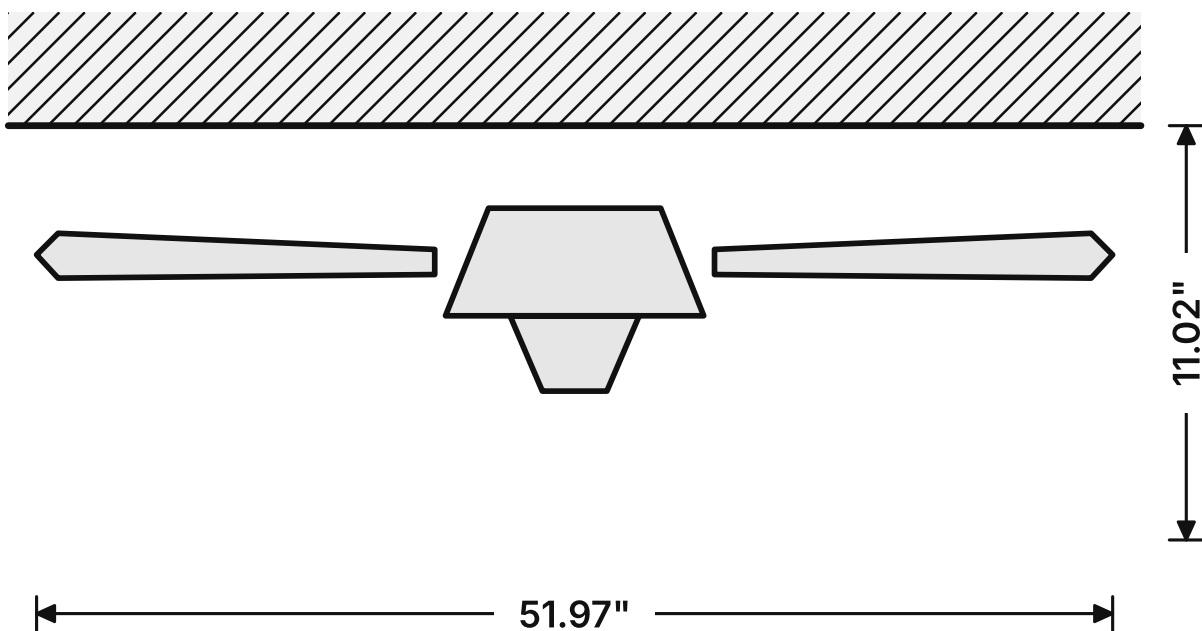

Read all instructions before you start, and keep them for future reference.



Installation precautions

1. Turn off the power at the breaker before you start, and check the wires are dead with a voltage tester.
2. If you are not sure how to wire it, have a licensed electrician do it. Follow local electrical codes.
3. Make sure the ceiling or wall box can carry the weight of the fixture.
4. Wear gloves so the finish stays clean.

Tools needed



Phillips screwdriver



Wire stripper



Voltage tester



Step ladder

Parts list

CHECK ALL PARTS BEFORE YOU START

A

x1



Ceiling fan with light

B

 
x1 set



Mounting bracket and screws

C

x1




Remote control

Wiring

	Wire	House supply	Fixture
L	Live (hot)	black	black or marked wire
N	Neutral	white	white or ribbed wire
G	Ground	green or bare copper	green or green-yellow






Join each pair with wire connectors. Connect ground to the green screw on the bracket or plate if there is one.

Exploded view

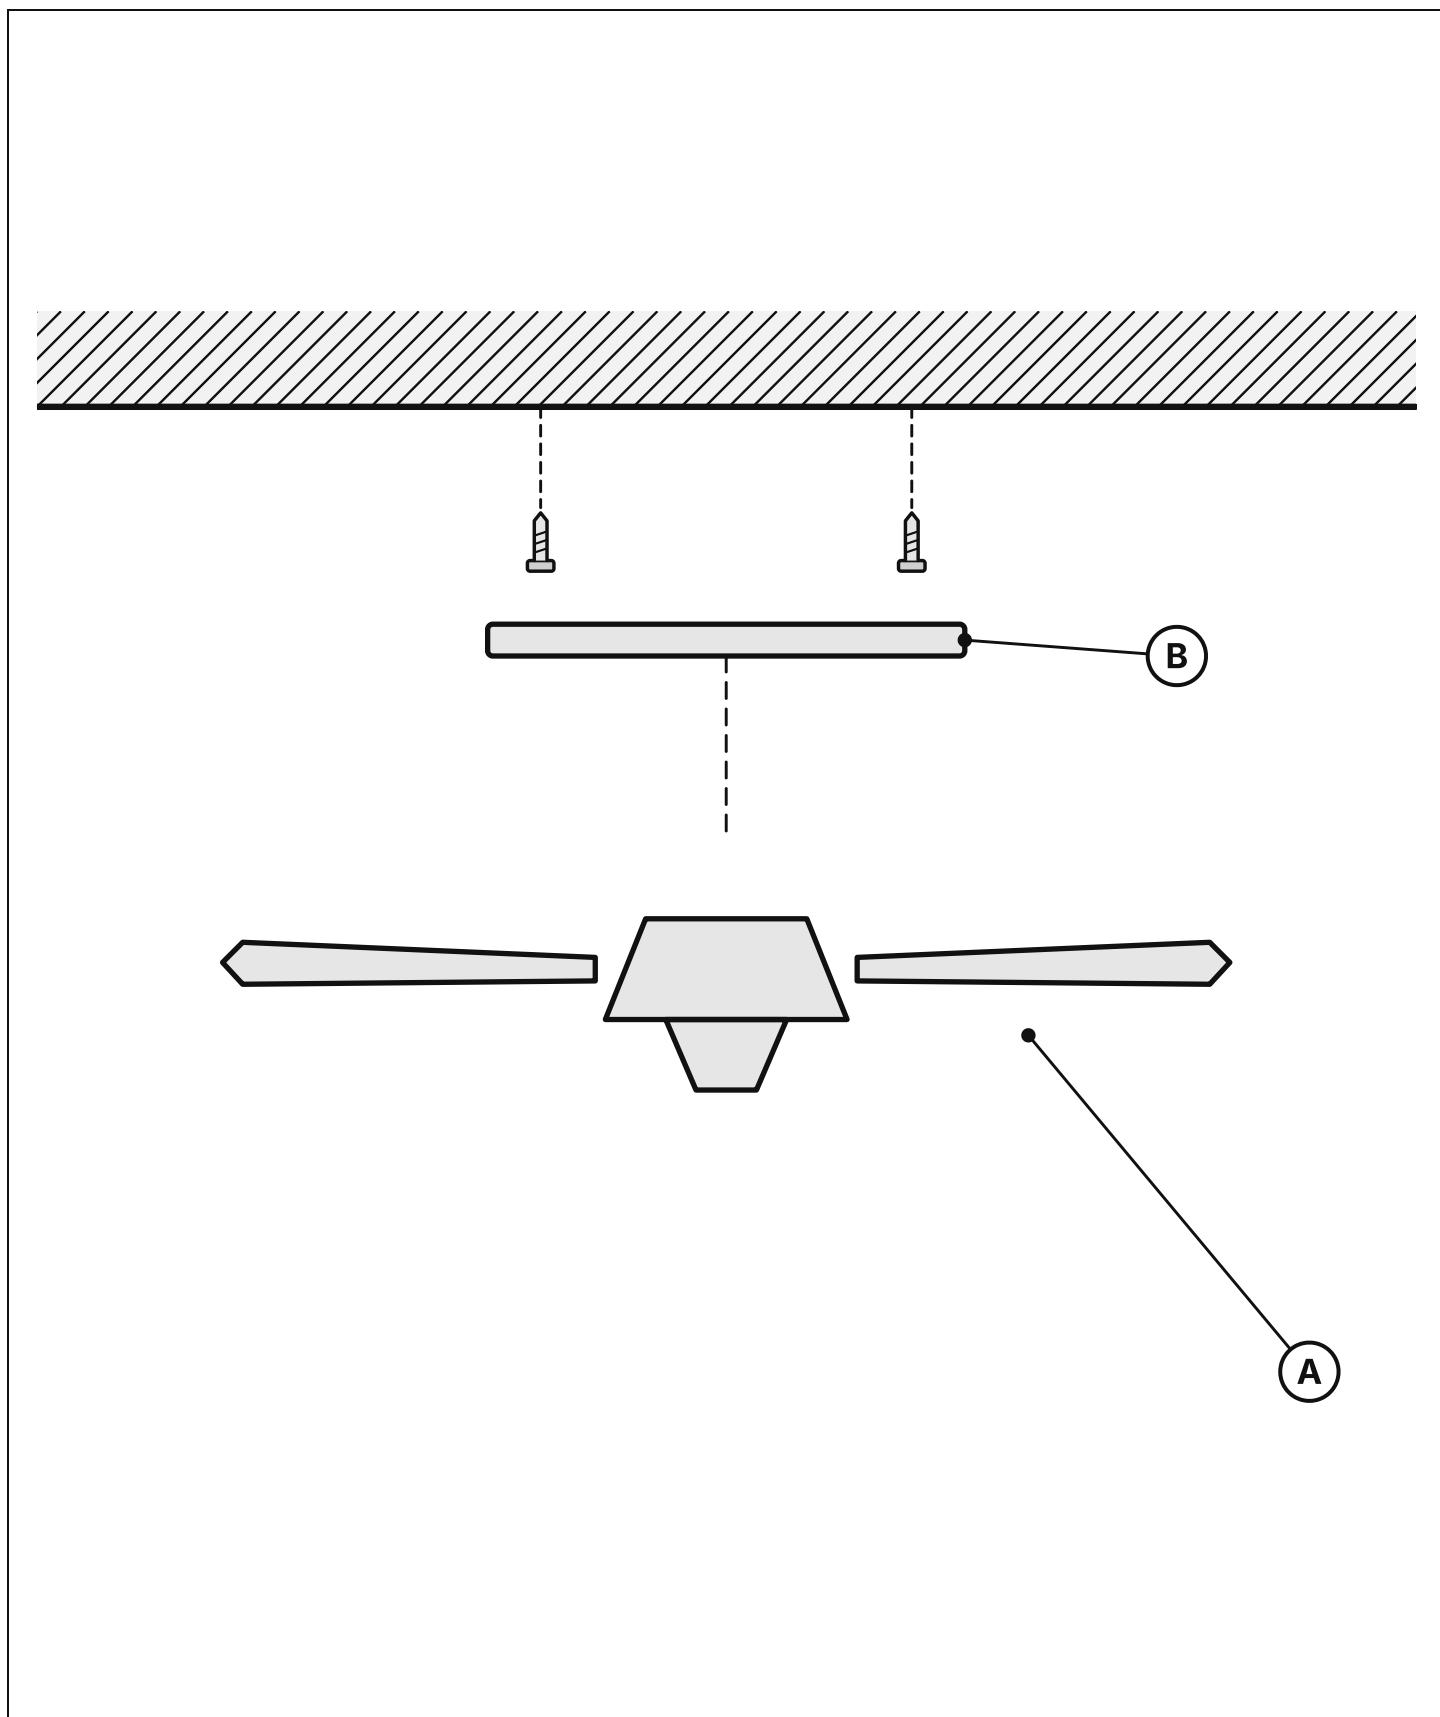**A** Ceiling fan with light ×1**B** Mounting bracket and screws ×1 set**C** Remote control ×1

Installation

STEPS 1-5 OF 5

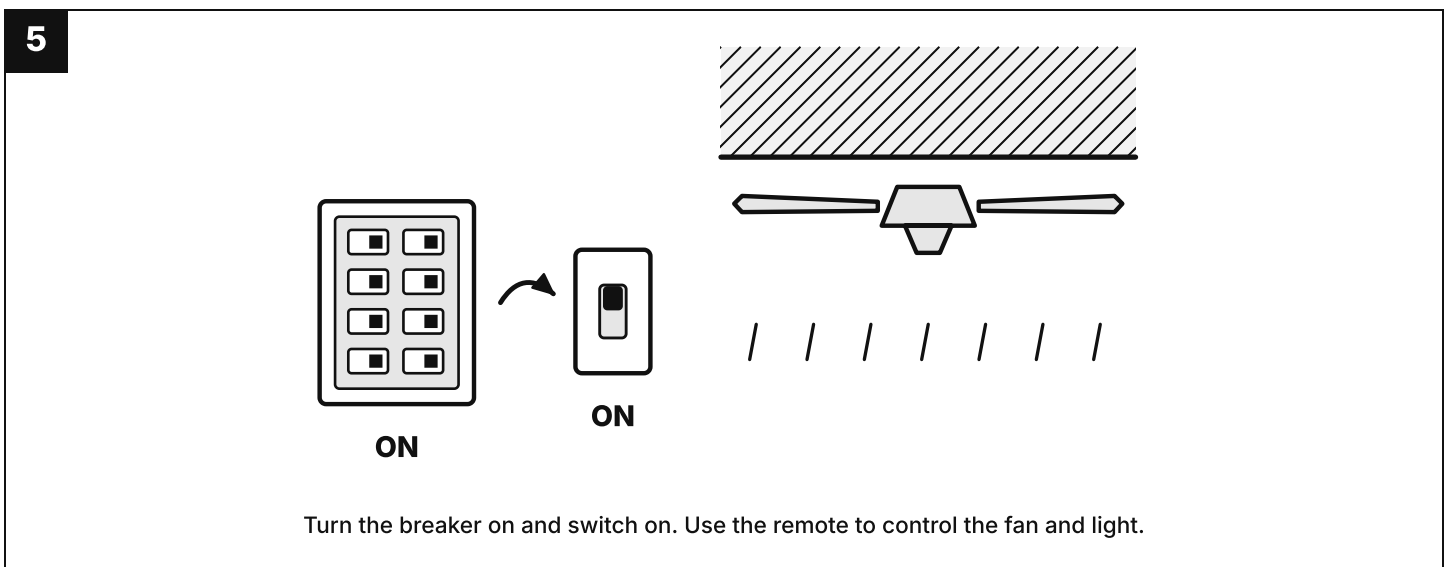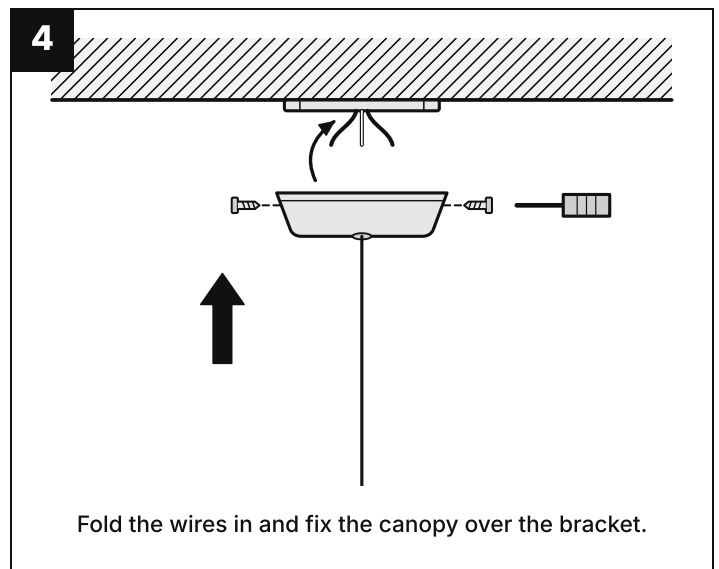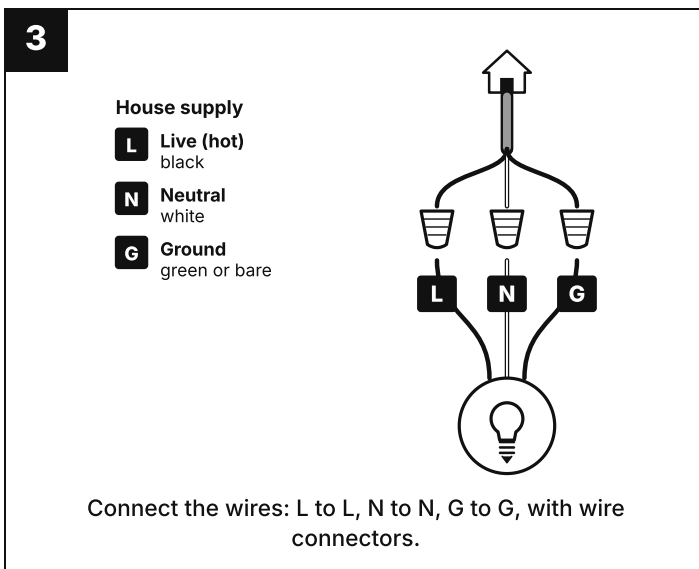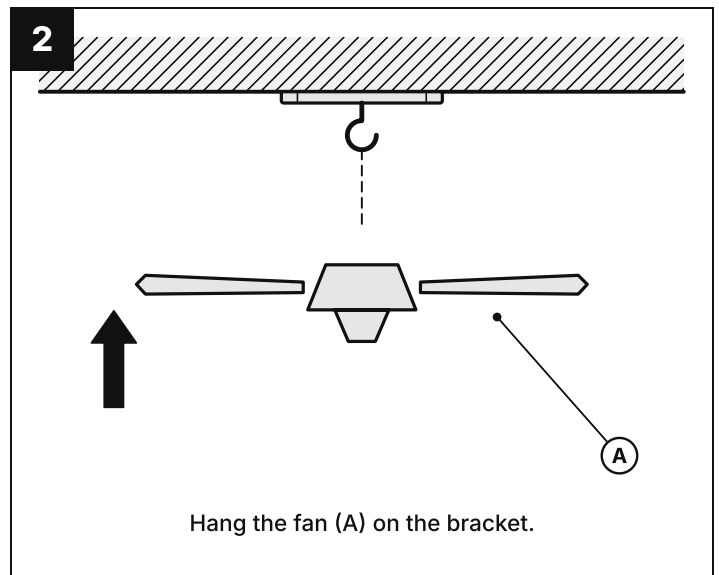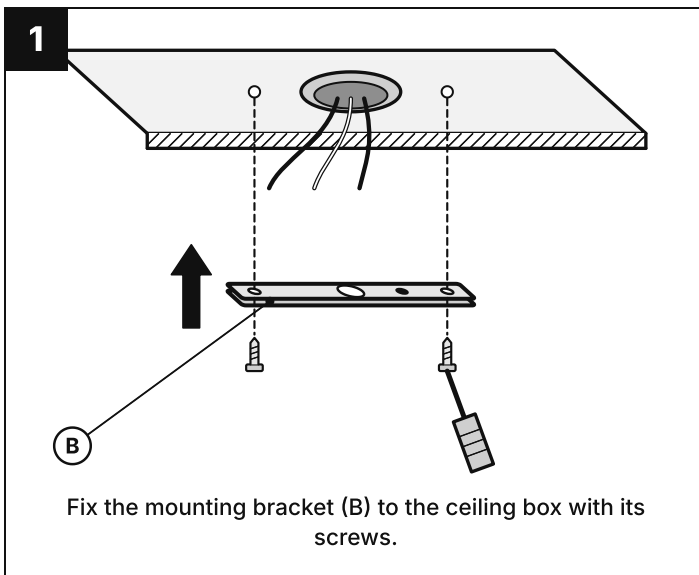

Care

- Wipe clean with a soft, dry cloth.
- Keep away from prolonged standing water.
- Switch the fixture off and let it cool before cleaning.

Troubleshooting

Problem	What to do
Light does not come on	Check the breaker and wall switch. Turn the power off and check each wire connection is tight.
Light flickers	Turn the power off and re-make the connections. On a dimmable model, use an LED-rated dimmer.
Fixture sits crooked	Loosen the mounting screws, level the bracket and retighten.

Need help?

Email info@norafurnish.com with your order number and a photo. A part missing or damaged? We will send a new one.

NoraFurnish