


Chandra

Wall light

MODEL: LI001520

DESIGN DRAWING

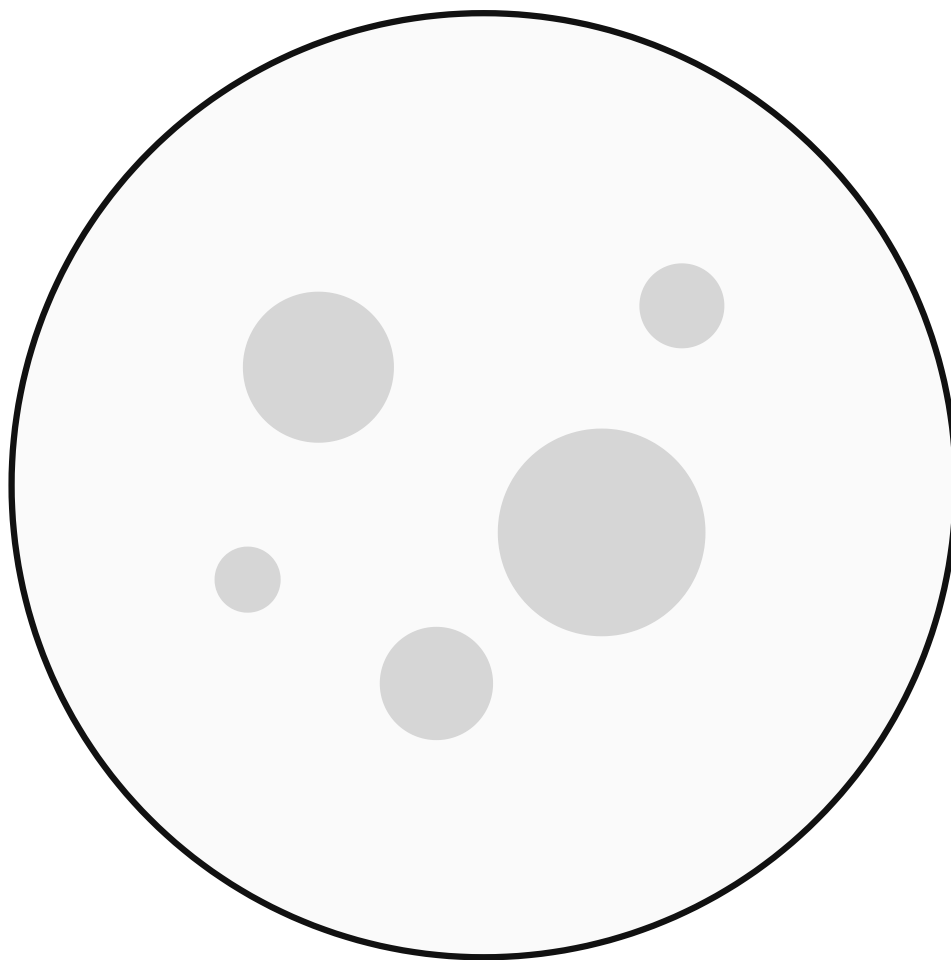

9.4, 11.8, 19.7, 23.6, 31.5 or 39.4 inch diameters; 1.57 inches deep



Read all instructions before you start, and keep them for future reference.



Installation precautions

1. Turn off the power at the breaker before you start, and check the wires are dead with a voltage tester.
2. If you are not sure how to wire it, have a licensed electrician do it. Follow local electrical codes.
3. Indoor use only.
4. Wear gloves so the finish stays clean.

Tools needed



Phillips screwdriver



Wire stripper



Voltage tester



Step ladder







Drill



Level

Parts list

CHECK ALL PARTS BEFORE YOU START

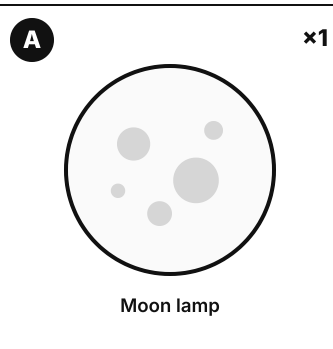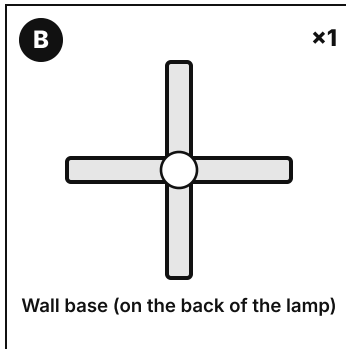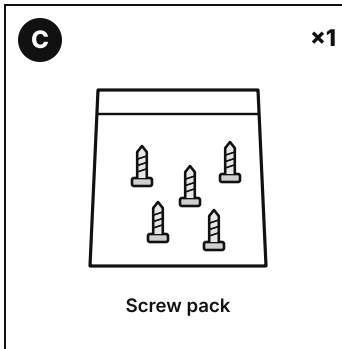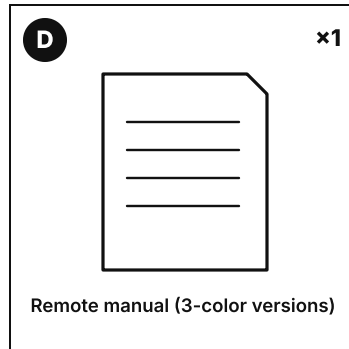


Wiring

	Wire	House supply	Fixture
L	Live (hot)	black	brown
N	Neutral	white	blue
G	Ground	green or bare copper	yellow-green

Join each pair with lever connectors. Connect ground to the green screw on the bracket or plate if there is one.

Exploded view

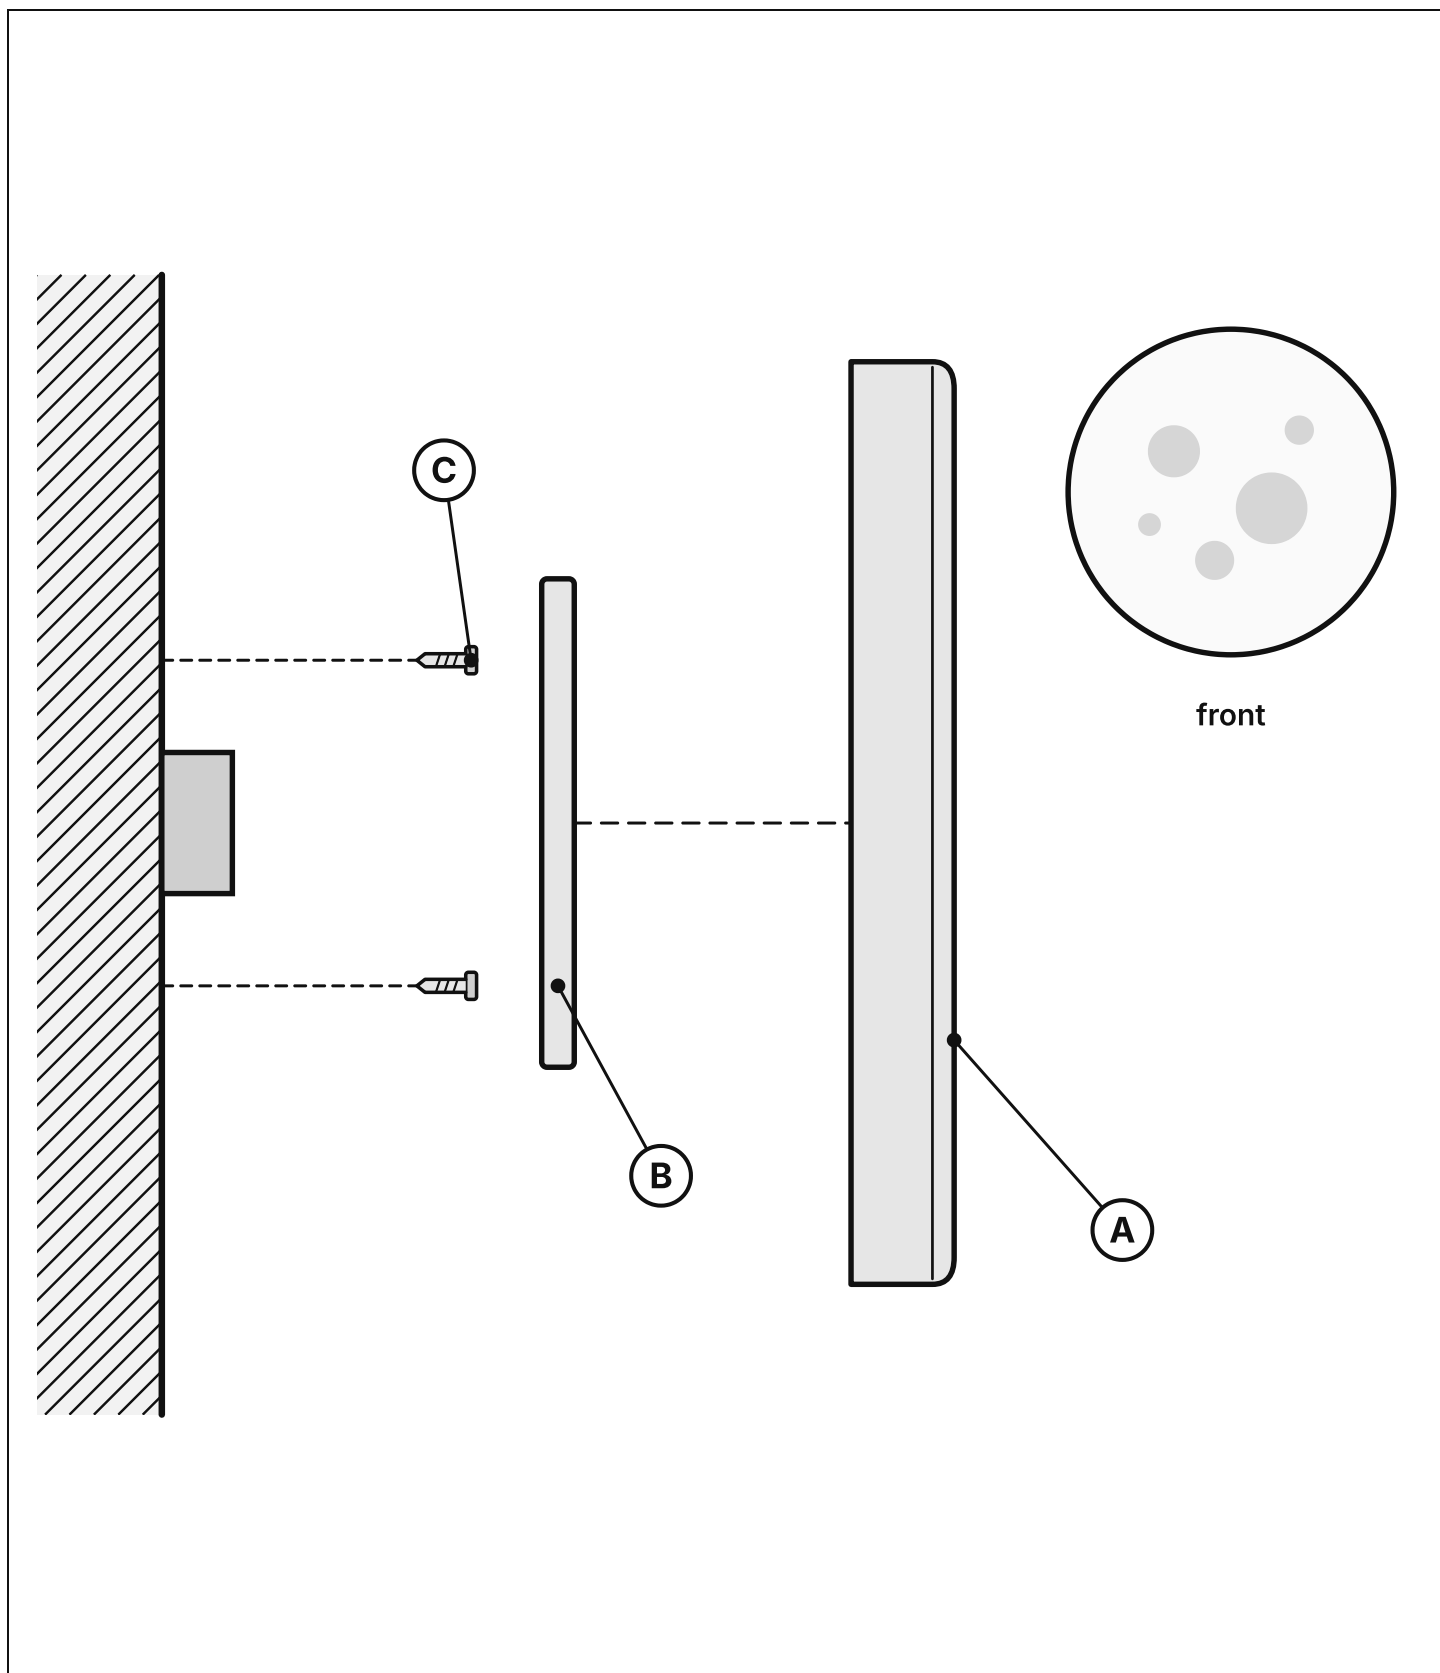

A Moon lamp ×1

B Wall base (on the back of the lamp) ×1


C Screw pack ×1

D Remote manual (3-color versions) ×1

Installation


STEPS 1-5 OF 5

1

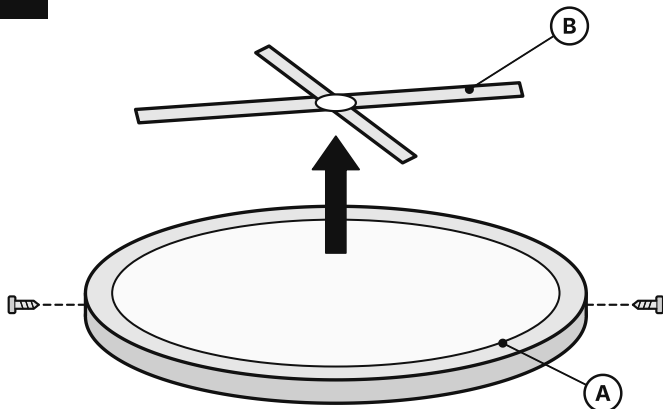

Take the base (B) off the back of the lamp (A).

2

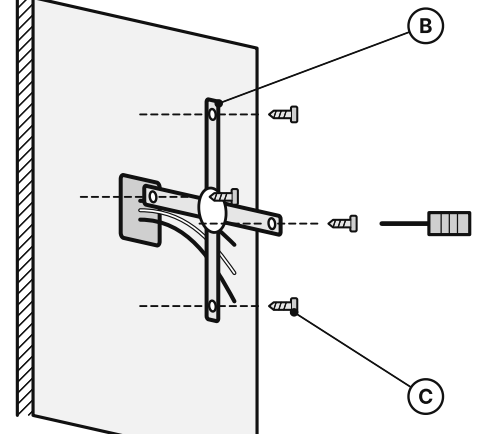

Fix the base (B) to the wall box with the screws (C).


3

House supply

- L** Live (hot) black
- N** Neutral white
- G** Ground green or bare


Fixture wires

- L brown
- N blue
- G yellow-green

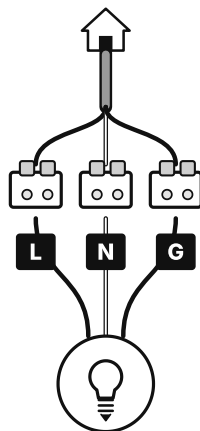



Connect with the lever connectors: brown to L, blue to N, yellow-green to G.

4

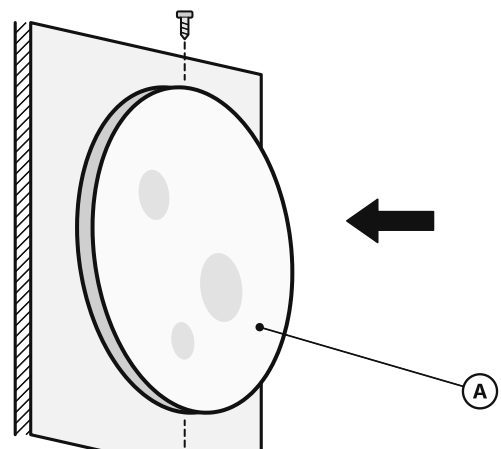

Fit the lamp (A) onto the base (B) and secure it.

5

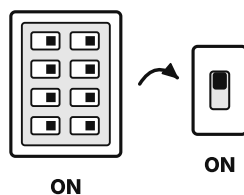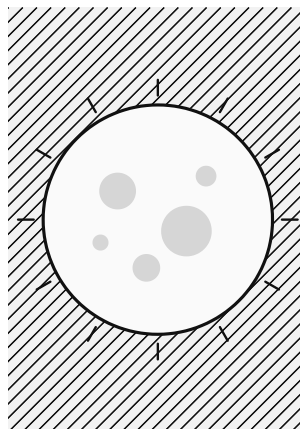

Turn the breaker on and switch on. 3-color versions: see the remote manual (D).

Care

- Wipe clean with a soft, dry cloth.
- Dry the metal if it gets damp.
- Switch the fixture off and let it cool before cleaning.

Troubleshooting

Problem	What to do
Light does not come on	Check the breaker and wall switch. Turn the power off and check each wire connection is tight.
Light flickers	Turn the power off and re-make the connections. On a dimmable model, use an LED-rated dimmer.
Fixture sits crooked	Loosen the mounting screws, level the bracket and retighten.

Need help?

Email info@norafurnish.com with your order number and a photo. A part missing or damaged? We will send a new one.

NoraFurnish