


# Parquet

Outdoor wall light

MODEL: LI002407-0

## DESIGN DRAWING

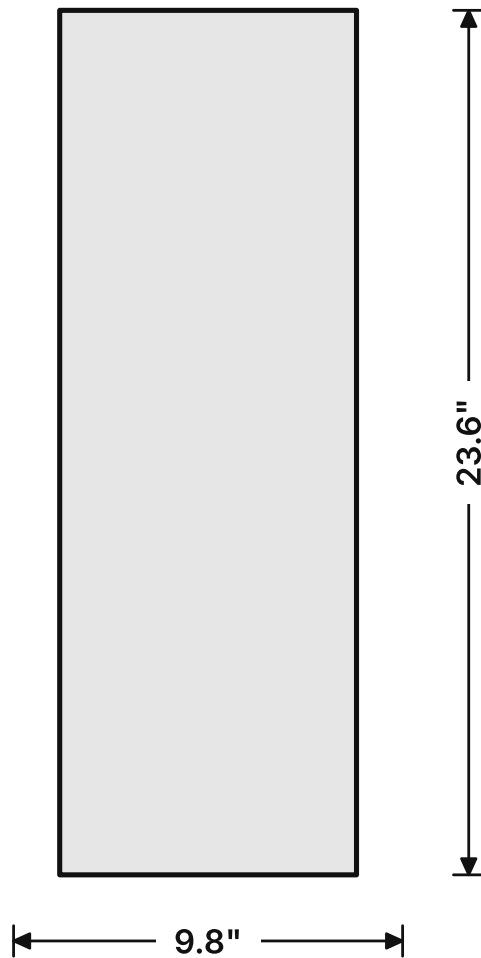

Shown: 23.6"



Read all instructions before you start, and keep them for future reference.



### Installation precautions

1. Turn off the power at the breaker before you start, and check the wires are dead with a voltage tester.
2. If you are not sure how to wire it, have a licensed electrician do it. Follow local electrical codes.
3. Make sure the ceiling or wall box can carry the weight of the fixture.
4. For outdoor use, keep every connection inside a weatherproof box.

### Tools needed



Phillips screwdriver



Wire stripper



 
Voltage tester



Step ladder



Drill



Exterior caulk

### Parts list

CHECK ALL PARTS BEFORE YOU START

**A**

×1



Outdoor wall light

**B**

×1 set




Mounting plate and screws

### Wiring

|          | Wire       | House supply         | Fixture               |
|----------|------------|----------------------|-----------------------|
| <b>L</b> | Live (hot) | black                | black or marked wire  |
| <b>N</b> | Neutral    | white                | white or ribbed wire  |
| <b>G</b> | Ground     | green or bare copper | green or green-yellow |

Join each pair with wire connectors. Connect ground to the green screw on the bracket or plate if there is one.

Exploded view

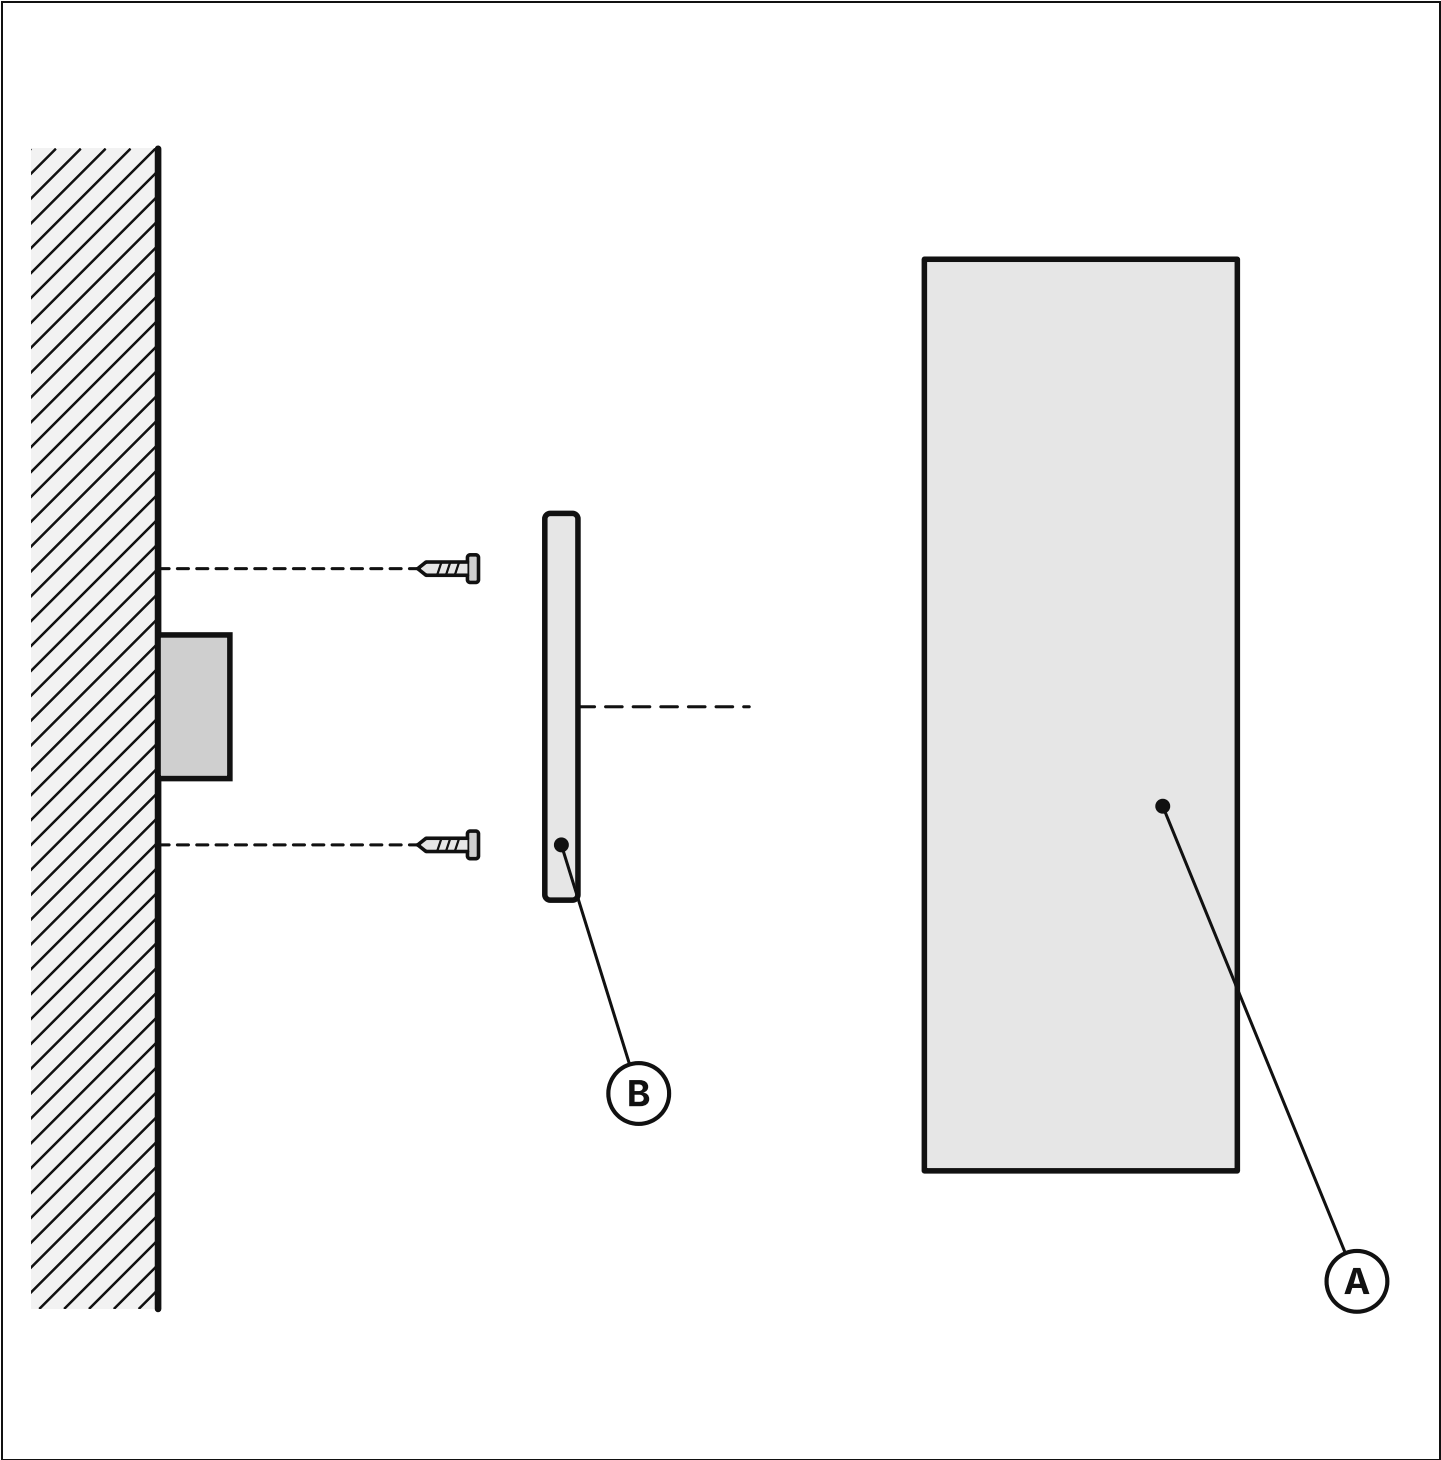


- A** Outdoor wall light ×1
- B** Mounting plate and screws ×1 set

| Size  | Width | Depth | Height |
|-------|-------|-------|--------|
| 23.6" | 9.8"  | 4.9"  | 23.6"  |
| 31.5" | 9.8"  | 4.9"  | 31.5"  |
| 39.4" | 9.8"  | 4.9"  | 39.4"  |
| 47.2" | 9.8"  | 4.9"  | 47.2"  |

## Installation

STEPS 1-5 OF 5

1

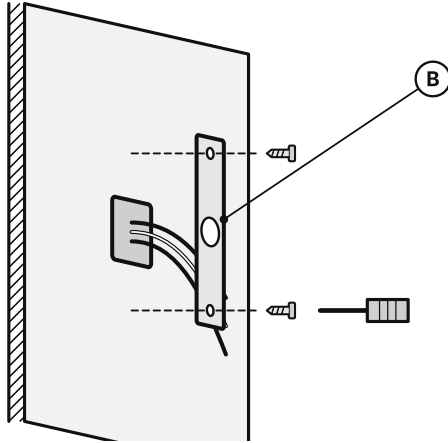


Fix the mounting plate (B) to the wall box with its screws.

2


### House supply

- L** Live (hot)  
black
- N** Neutral  
white
- G** Ground  
green or bare

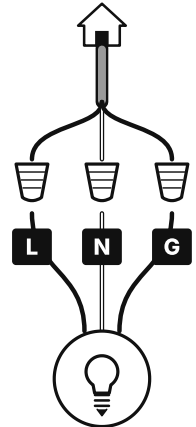


Connect the wires: L to L, N to N, G to G, with wire connectors.

3

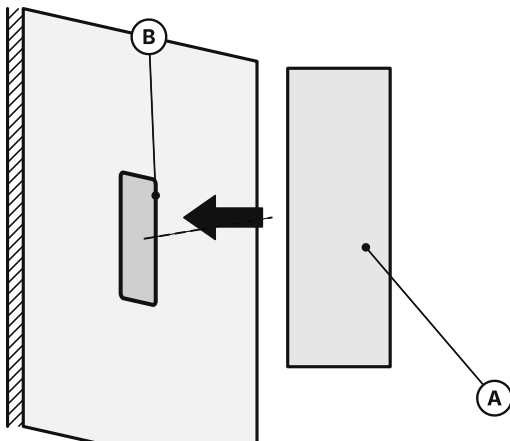

Fit the light (A) onto the plate and secure it.


4

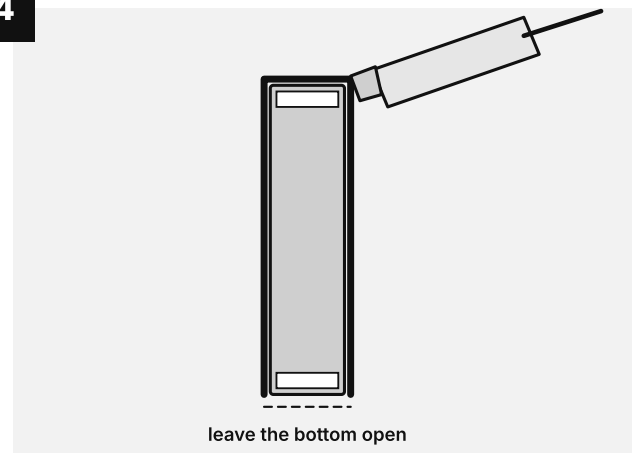

leave the bottom open


Seal the top and sides to the wall with exterior caulk. Leave the bottom open to drain.

5

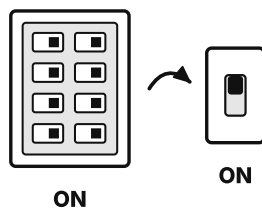

ON

ON

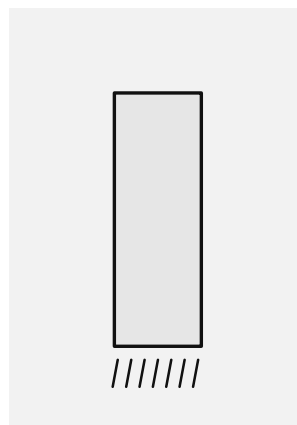

Turn the breaker on and switch on.

## Care

- Wipe clean with a soft, dry cloth.
- Dry the housing immediately if it gets wet so the finish is not marked, and do not use abrasive pads on it.
- Use only mild soapy water on the diffuser, as solvents will scratch or cloud it.

## Troubleshooting

| Problem                | What to do                                                                                     |
|------------------------|------------------------------------------------------------------------------------------------|
| Light does not come on | Check the breaker and wall switch. Turn the power off and check each wire connection is tight. |
| Light flickers         | Turn the power off and re-make the connections. On a dimmable model, use an LED-rated dimmer.  |
| Fixture sits crooked   | Loosen the mounting screws, level the bracket and retighten.                                   |

### Need help?

Email [info@norafurnish.com](mailto:info@norafurnish.com) with your order number and a photo. A part missing or damaged? We will send a new one.

*NoraFurnish*