


Swell

Linear pendant light

MODEL: DZ536HS

DESIGN DRAWING

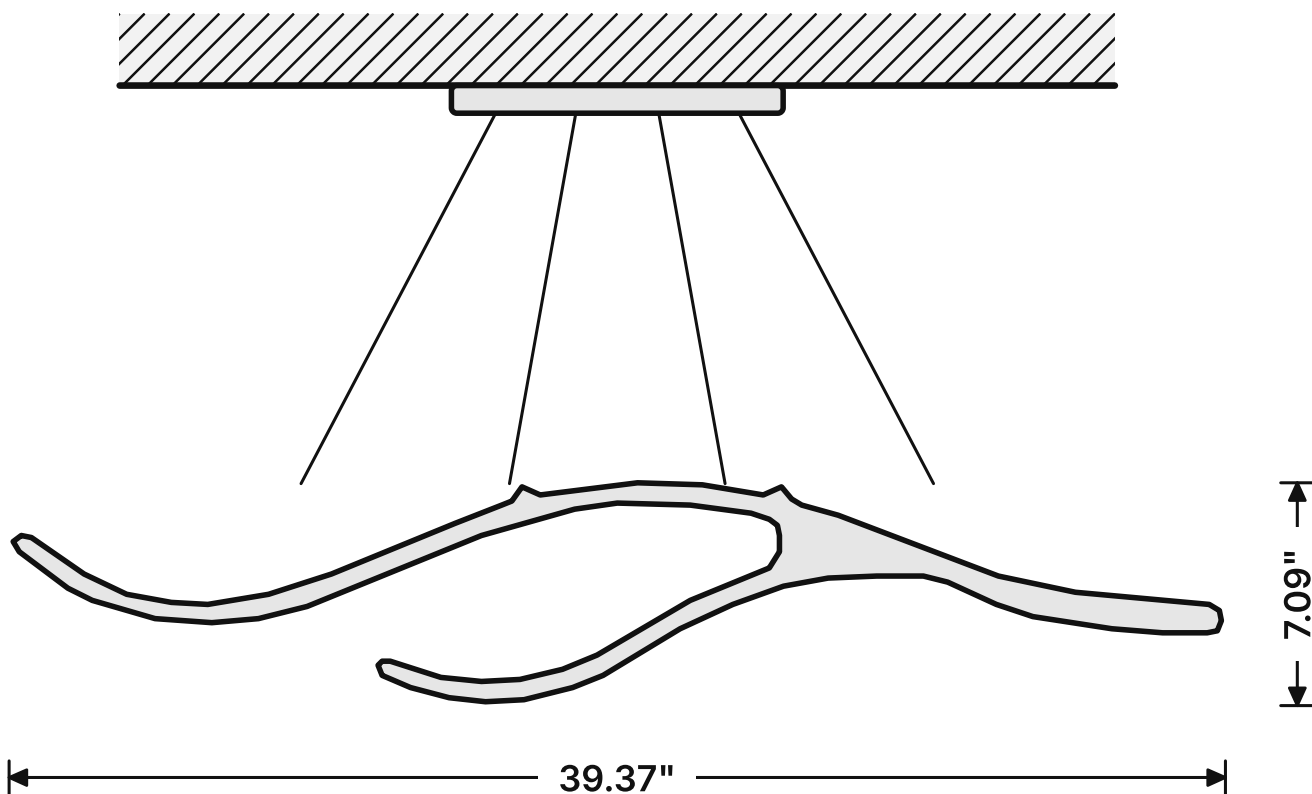

Shown: 39"



Read all instructions before you start, and keep them for future reference.



Installation precautions

1. Turn off the power at the breaker before you start, and check the wires are dead with a voltage tester.
2. If you are not sure how to wire it, have a licensed electrician do it. Follow local electrical codes.
3. Indoor use. The dimmable version needs an LED-rated dimmer.
4. Wear gloves so the finish stays clean.

Tools needed



Phillips screwdriver



Wire stripper






Voltage tester



Step ladder

Parts list

CHECK ALL PARTS BEFORE YOU START

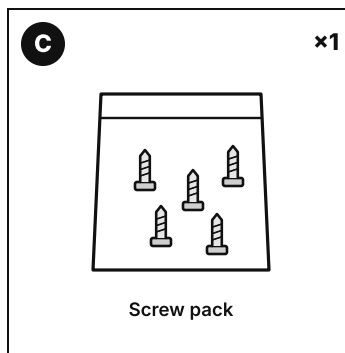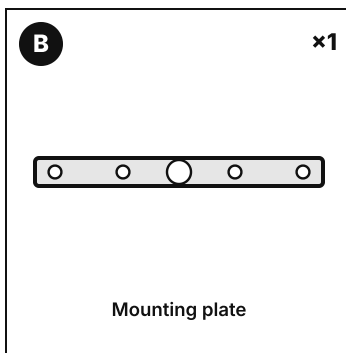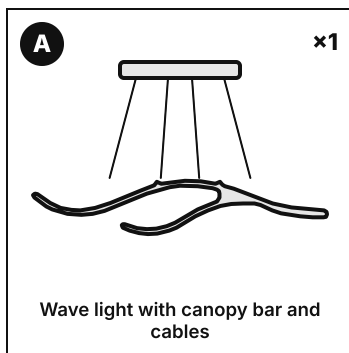


Wiring

	Wire	House supply	Fixture
L	Live (hot)	black	brown
N	Neutral	white	blue
G	Ground	green or bare copper	yellow-green

Join each pair with lever connectors. Connect ground to the green screw on the bracket or plate if there is one.

Exploded view

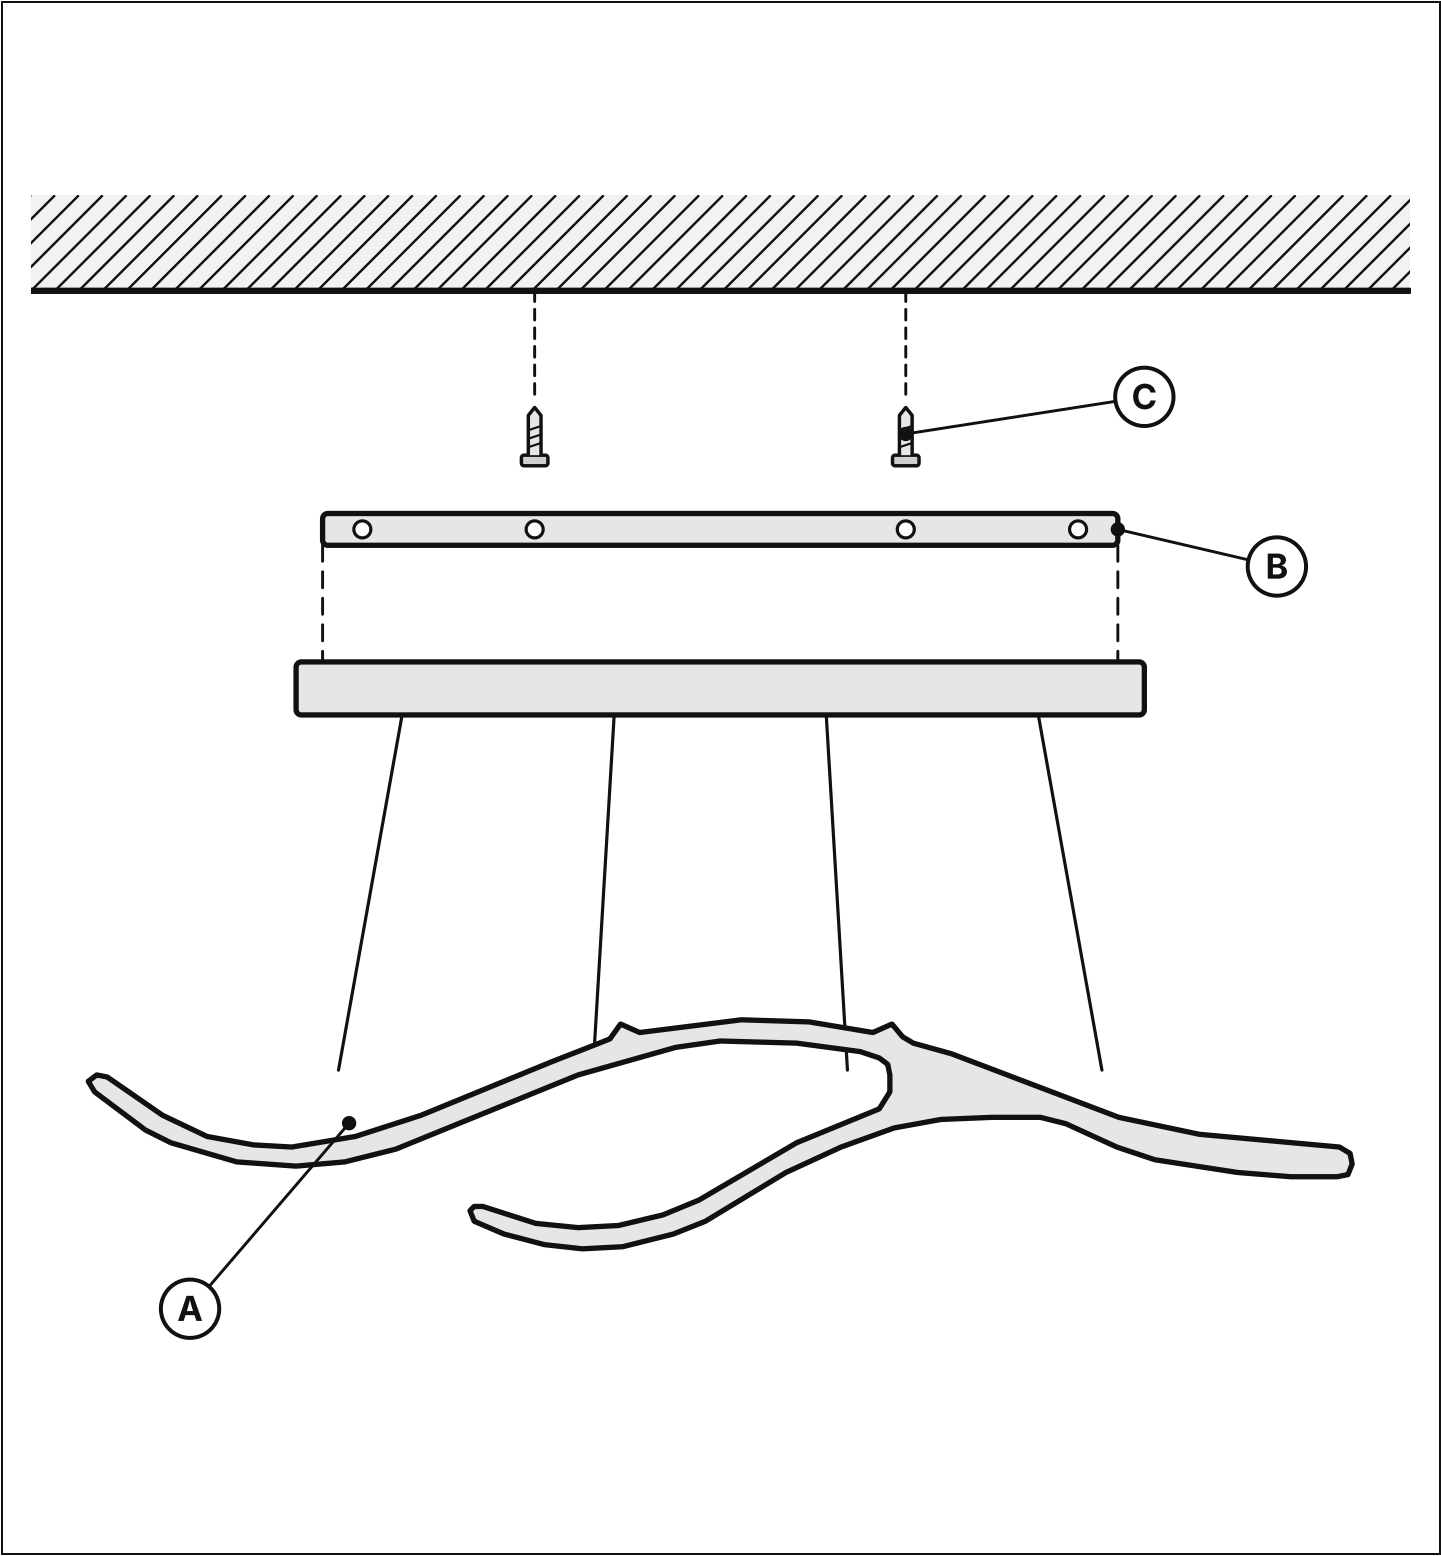


- A** Wave light with canopy bar and cables ×1
- B** Mounting plate ×1
- C** Screw pack ×1

Size	Length	Height
39"	39.37"	7.09"
47"	47.24"	11.02"

Installation

STEPS 1-5 OF 5

1

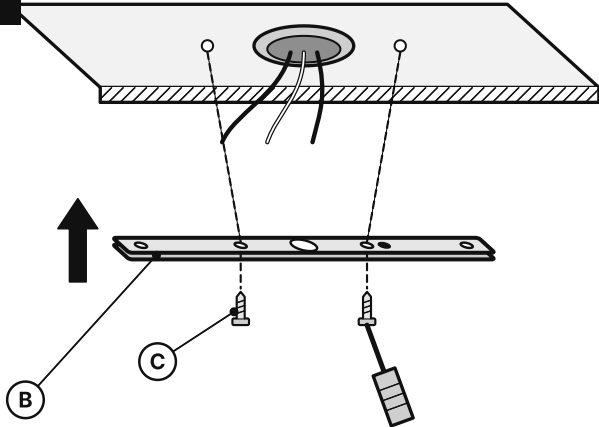

Fix the mounting plate (B) to the ceiling box with the screws (C).


2

House supply

- L** Live (hot)
black
- N** Neutral
white
- G** Ground
green or bare


Fixture wires

- L brown
- N blue
- G yellow-green

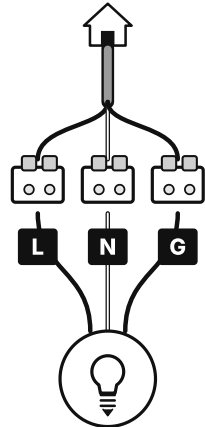


Connect with the lever connectors: brown to L, blue to N, yellow-green to G.

3

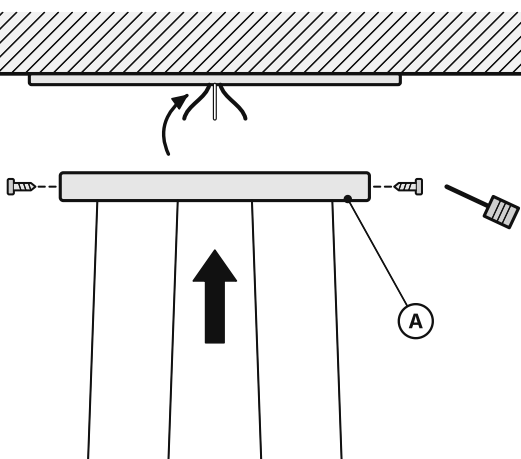


Lift the canopy bar onto the plate (B) and tighten the side screws.

4

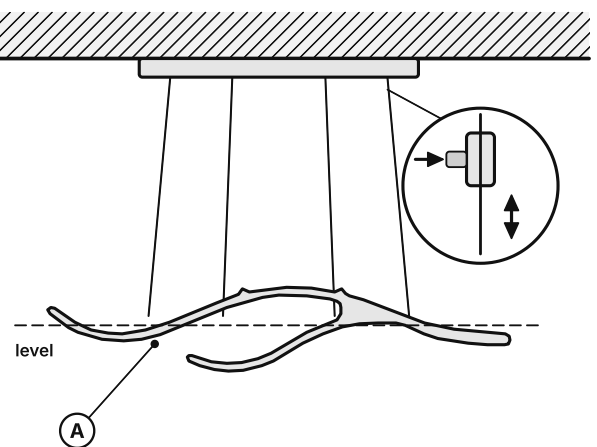


Press the cable grip and slide each cable to set the height. Keep the light level.

5

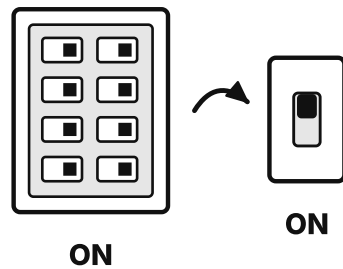

Turn the breaker on and switch on at the wall.

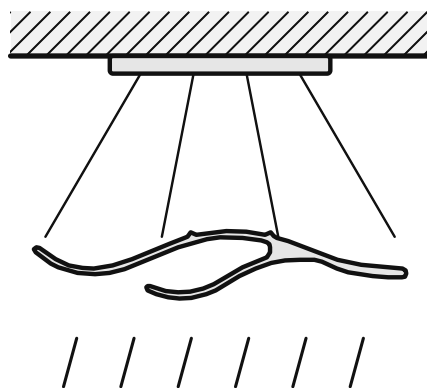

Care

- Wipe clean with a soft, dry cloth.
- Dry the metal if it gets damp.
- Switch the fixture off and let it cool before cleaning.

Troubleshooting

Problem	What to do
Light does not come on	Check the breaker and wall switch. Turn the power off and check each wire connection is tight.
Light flickers	Turn the power off and re-make the connections. On a dimmable model, use an LED-rated dimmer.
Fixture hangs crooked	Adjust the cord, chain or cables until it hangs level.

Need help?

Email info@norafurnish.com with your order number and a photo. A part missing or damaged? We will send a new one.

NoraFurnish