
Chalet Picture Frame Set

Wall Decor

MODEL: NF-4X6WOOP-01

DESIGN DRAWING



⚠ **Read all instructions before you start, and keep them for future reference.**

Mounting precautions

1. Check what is behind the wall before drilling: pipes, wires and studs.
2. Use anchors suited to your wall and to the weight of the piece.


Tools needed



Pencil



Level



Drill




Phillips screwdriver

Parts list


CHECK ALL PARTS BEFORE YOU START

A ×1



Chalet Picture Frame Set

B ×1 set

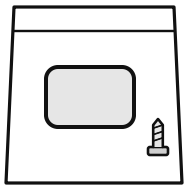


Mounting hardware

Mounting


STEPS 1–5 OF 5

1

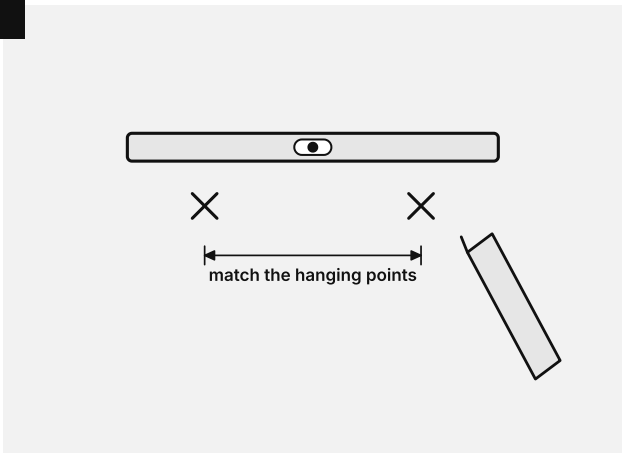


Hold the piece (A) in place, level it and mark the hanging points.

2

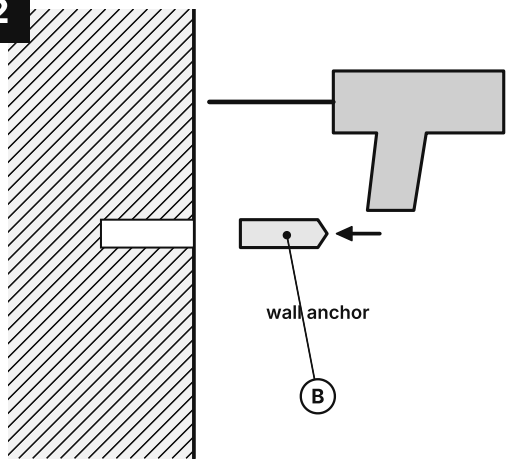


Drill the holes and push in wall anchors (B).

3

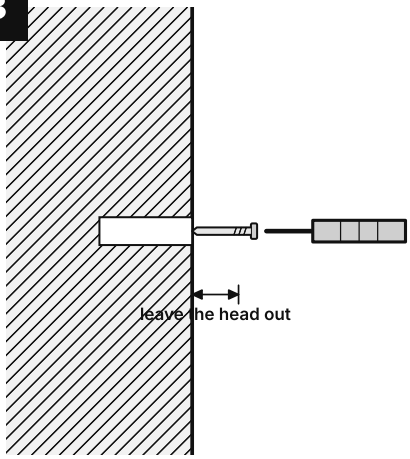


Drive the screws in, leaving the heads out slightly to hang on.

4

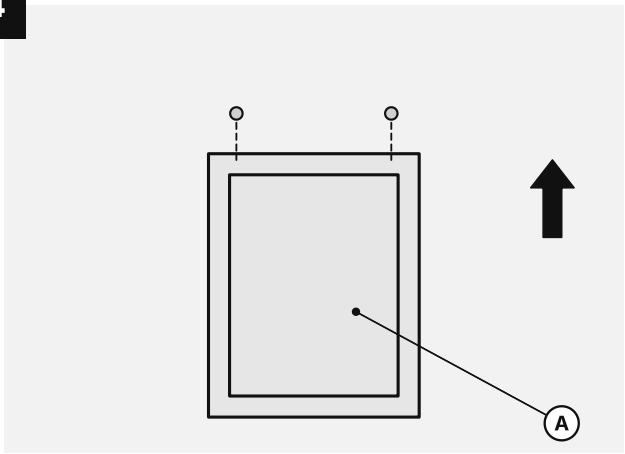

Hang the piece (A) on the screws.

5

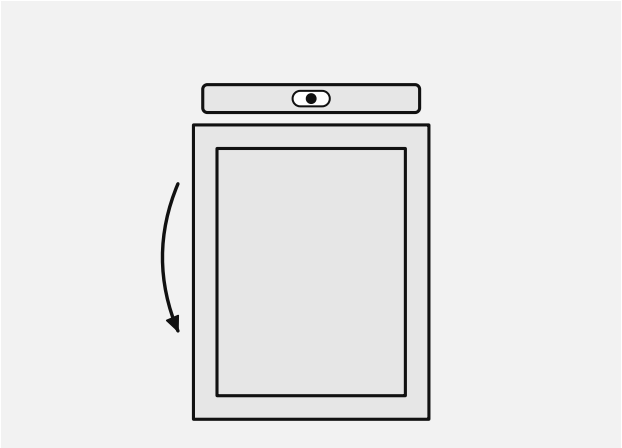

Check it is level.

Care

- Wipe clean with a soft, dry cloth.
- Keep away from prolonged moisture and direct sunlight to protect the finish.

Troubleshooting

Problem	What to do
Piece is not level	Loosen one screw slightly or add a small felt pad behind the low side.
Screw will not hold	Use a larger wall anchor, or fix into a stud.

Need help?
Email info@norafurnish.com with your order number and a photo. A part missing or damaged? We will send a new one.

NoraFurnish