
Auden Photo Frame

Photo frame

MODEL: NF-B34-013

DESIGN DRAWING

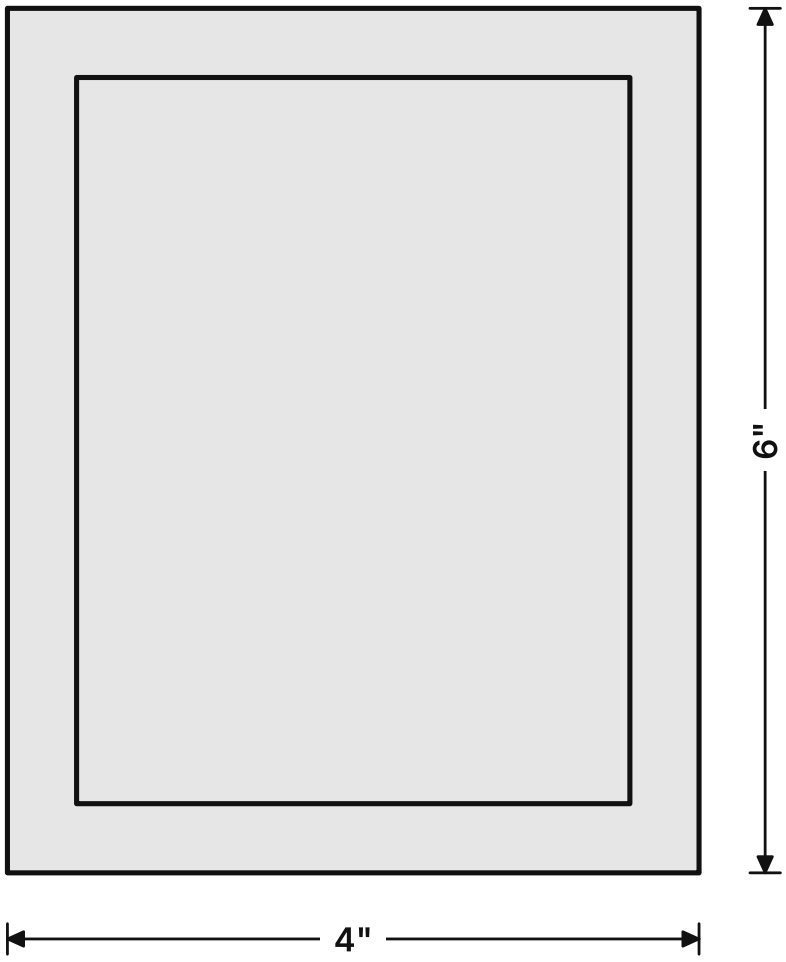

Shown: 4" x 6"

⚠ **Read all instructions before you start, and keep them for future reference.**

Handling precautions

1. Set it on a flat, stable surface where it cannot be knocked off.
2. Remove all packaging before use, and keep plastic bags away from children.

Tools needed


No tools needed



Soft cloth


Your photo

Parts list

CHECK ALL PARTS BEFORE YOU START


A ×1


Auden Photo Frame

Care & Setup


STEPS 1–4 OF 4

1

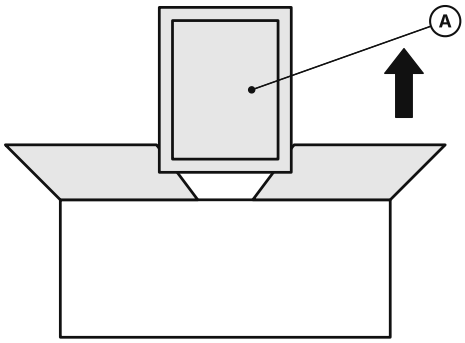


Unpack everything and remove all the packing material.

2

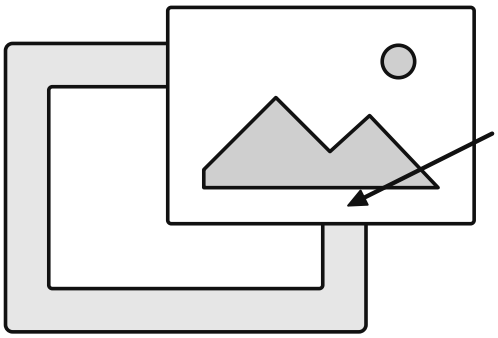


Peel the film from both faces of the acrylic.

3

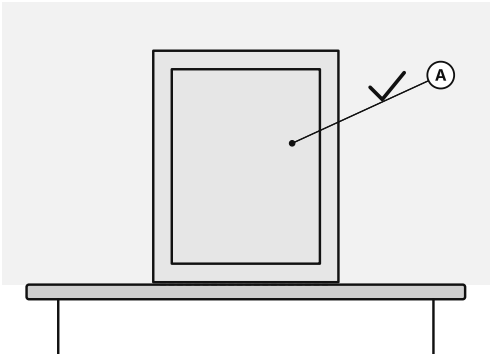

Set it on a flat, stable surface.

4

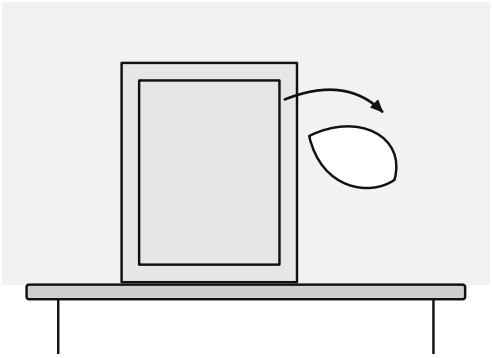

Wipe clean with a soft, dry cloth.

Care

- Wipe clean with a soft, dry cloth.
- Remove the protective film from both faces of the acrylic before first use.
- Do not use solvent cleaners on the acrylic, as they craze the surface.
- Keep away from moisture and direct sunlight.

Need help?
Email info@norafurnish.com with your order number and a photo. A part missing or damaged? We will send a new one.

NoraFurnish