
# Kohl

Pendant light

**MODEL: DZ4SS5C0**

**DESIGN DRAWING**

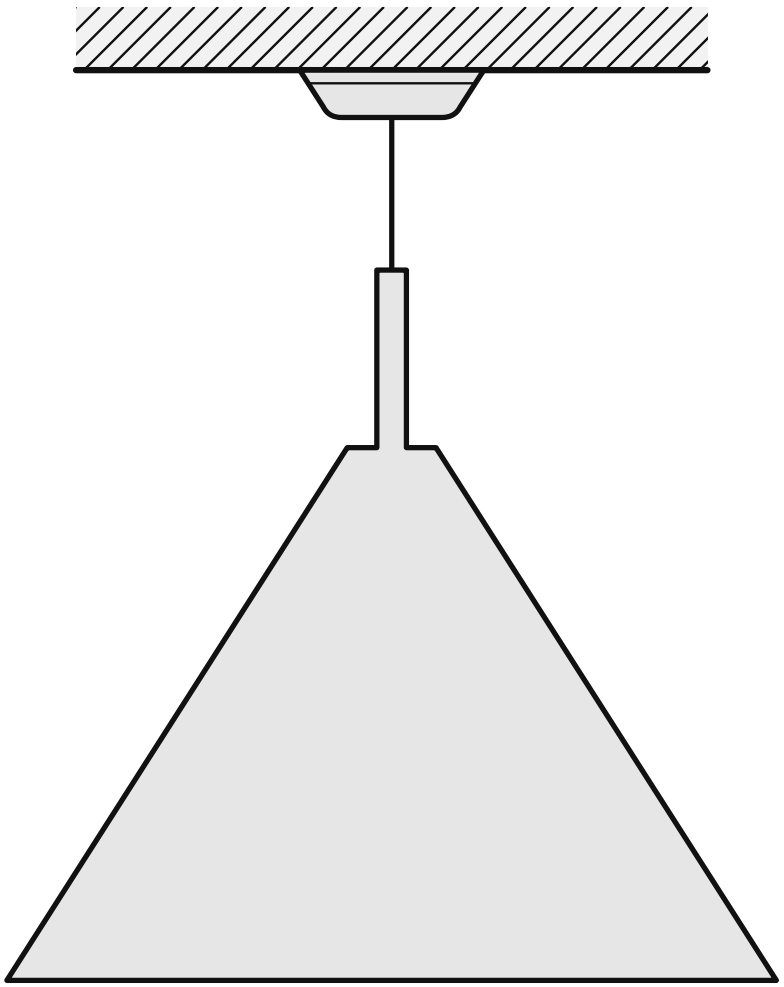

⚠ **Read all instructions before you start, and keep them for future reference.**

**Installation precautions**

1. Turn off the power at the breaker before you start, and check the wires are dead with a voltage tester.
2. If you are not sure how to wire it, have a licensed electrician do it. Follow local electrical codes.
3. Make sure the ceiling or wall box can carry the weight of the fixture.
4. Wear gloves so the finish stays clean.

## Tools needed


Phillips screwdriver


Wire stripper



Voltage tester


Step ladder


## Parts list

CHECK ALL PARTS BEFORE YOU START

**A** ×1

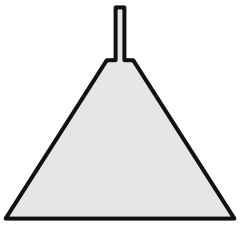
Pendant light with canopy

**B** ×1


Canopy

**C** ×1 set



Mounting bracket and screws

## Wiring

| | Wire | House supply | Fixture |
|---|---|---|---|
| L | Live (hot) | black | black or marked wire |
| N | Neutral | white | white or ribbed wire |
| G | Ground | green or bare copper | green or green-yellow |

Join each pair with wire connectors. Connect ground to the green screw on the bracket or plate if there is one.

## Exploded view

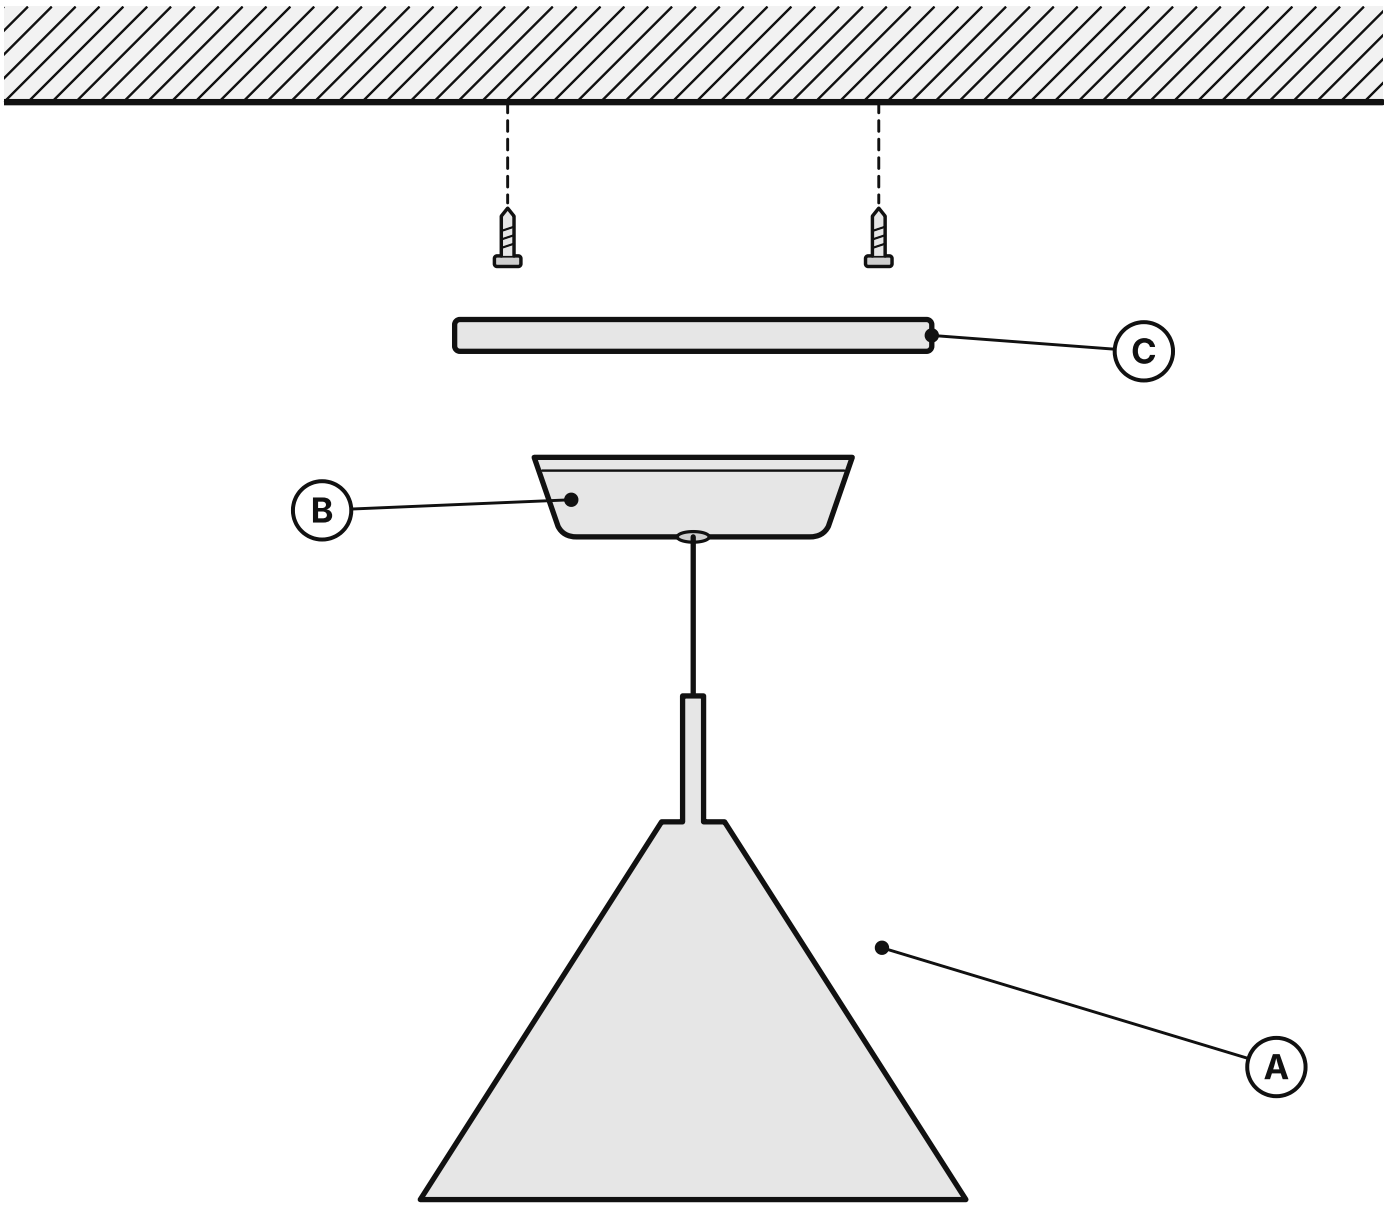


**A** Pendant light with canopy ×1


**B** Canopy ×1

**C** Mounting bracket and screws ×1 set

## Installation

STEPS 1–5 OF 5

### 1

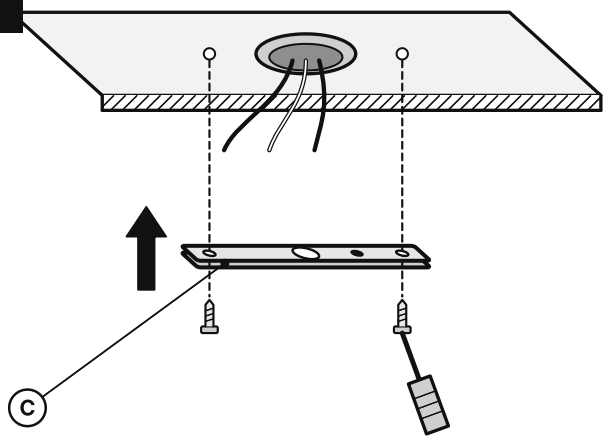



Fix the mounting bracket (C) to the ceiling box with its screws.

### 2


**House supply**

- **L** **Live (hot)** black
- **N** **Neutral** white
- **G** **Ground** green or bare

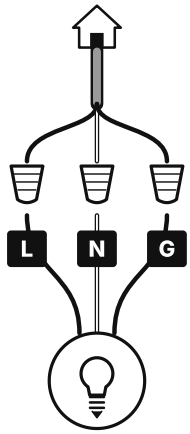



Connect the wires: L to L, N to N, G to G, with wire connectors.

### 3

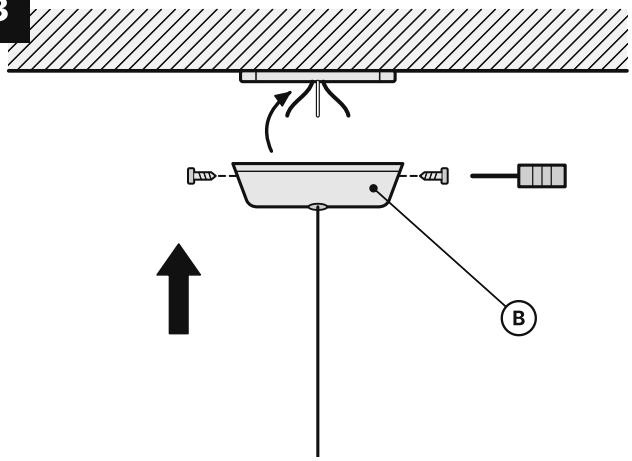



Tuck the wires into the box and fix the canopy (B) to the bracket.

### 4

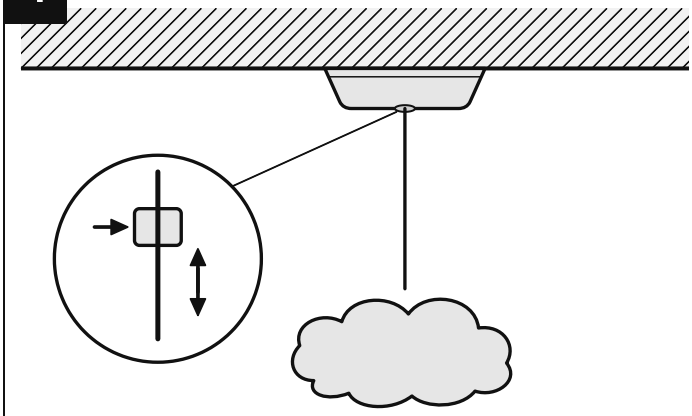

Set the hanging height at the canopy before the final tightening.

### 5

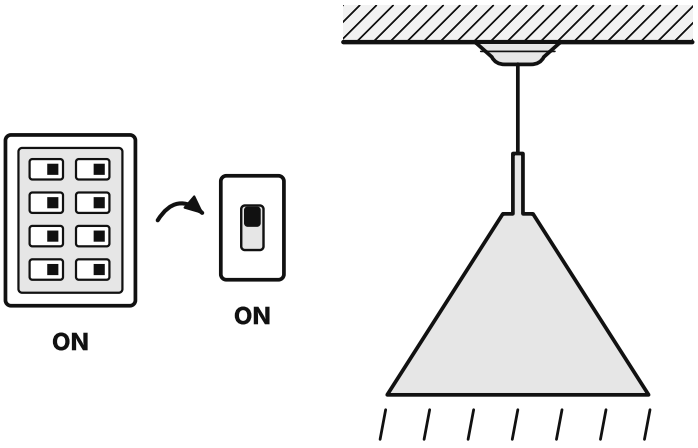


Turn the breaker on and switch on at the wall. Dimmable models need an LED-rated dimmer.

## Care

- Wipe clean with a soft, dry cloth.
- Switch the power off at the wall before cleaning.
- Acrylic scratches easily, so avoid abrasive cloths and solvent cleaners.

## Troubleshooting

| Problem | What to do |
|---|---|
| **Light does not come on** | Check the breaker and wall switch. Turn the power off and check each wire connection is tight. |
| **Light flickers** | Turn the power off and re-make the connections. On a dimmable model, use an LED-rated dimmer. |
| **Fixture hangs crooked** | Adjust the cord, chain or cables until it hangs level. |

**Need help?**
Email info@norafurnish.com with your order number and a photo. A part missing or damaged? We will send a new one.

NoraFurnish