
Cetra

Chandelier

MODEL: NF-3256812131657672

DESIGN DRAWING

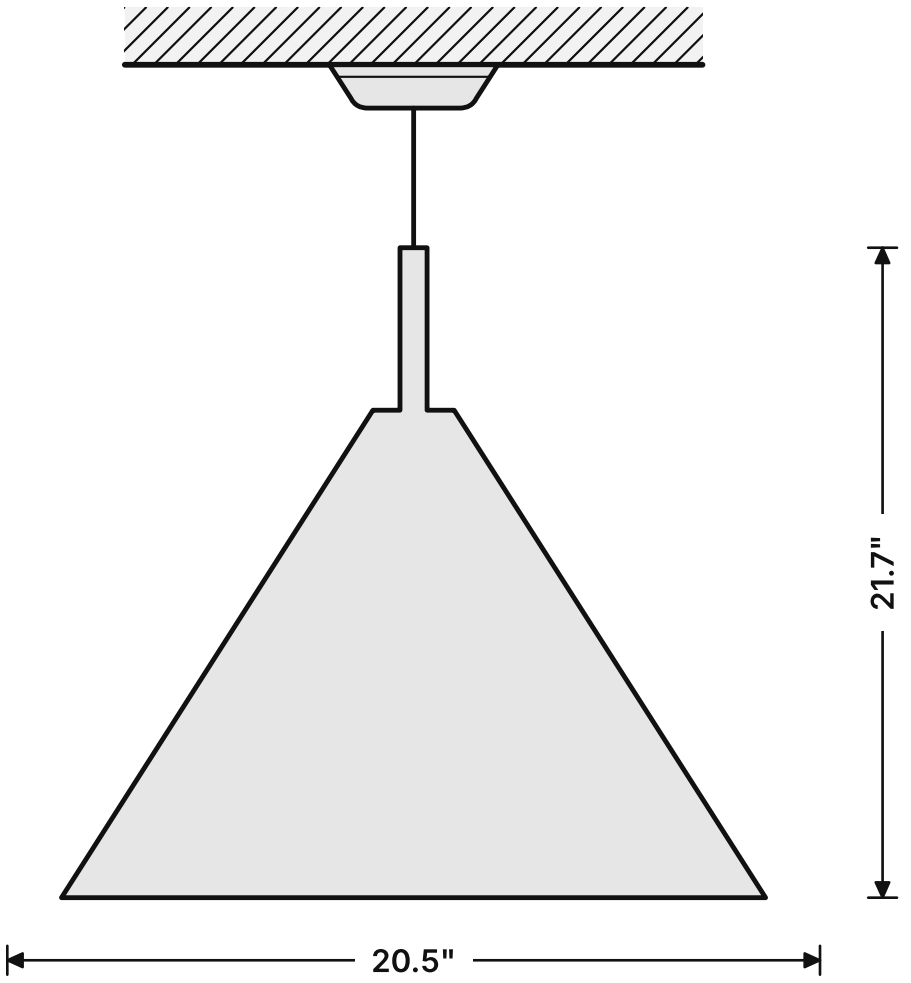

Shown: 3 Lights

⚠ **Read all instructions before you start, and keep them for future reference.**

Installation precautions

1. Turn off the power at the breaker before you start, and check the wires are dead with a voltage tester.
2. If you are not sure how to wire it, have a licensed electrician do it. Follow local electrical codes.
3. Make sure the ceiling or wall box can carry the weight of the fixture.
4. Wear gloves so the finish stays clean.

Tools needed


Phillips screwdriver


Wire stripper



Voltage tester


Step ladder


Parts list

CHECK ALL PARTS BEFORE YOU START

A ×1

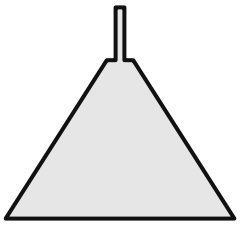
Chandelier with chain and canopy


B ×1


Canopy

C ×1 set


Mounting bracket and screws

D ×1 set

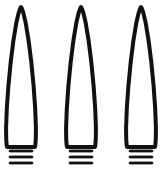

E14 bulbs

Wiring

	Wire	House supply	Fixture
L	Live (hot)	black	black or marked wire
N	Neutral	white	white or ribbed wire
G	Ground	green or bare copper	green or green-yellow

Join each pair with wire connectors. Connect ground to the green screw on the bracket or plate if there is one.

Exploded view

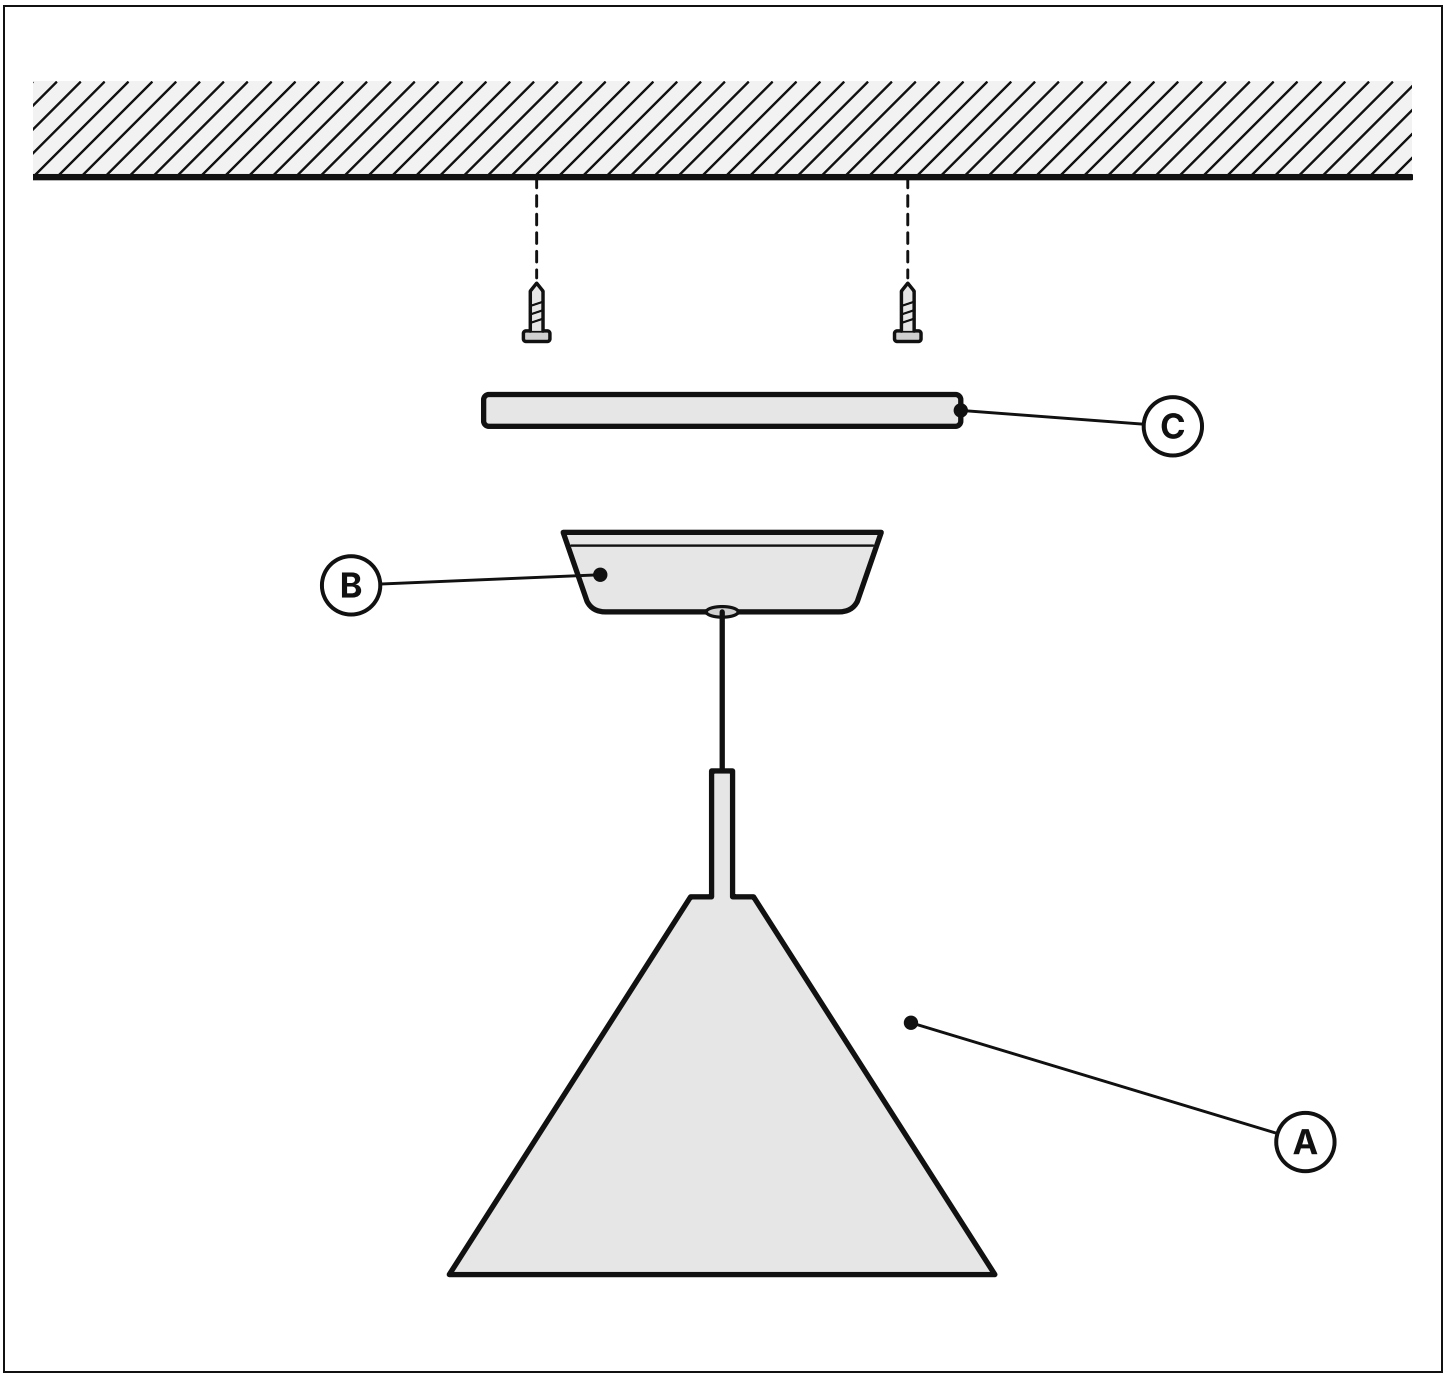

A Chandelier with chain and canopy ×1

B Canopy ×1

C Mounting bracket and screws ×1 set


D E14 bulbs ×1 set

Size	Width	Height
3 Lights	20.5"	21.7"
6 Lights	23.6"	21.7"
8 Lights	28.7"	21.7"
10 Lights	33.9"	23.6"
15 Lights	33.9"	31.5"

Installation


STEPS 1–6 OF 6

1

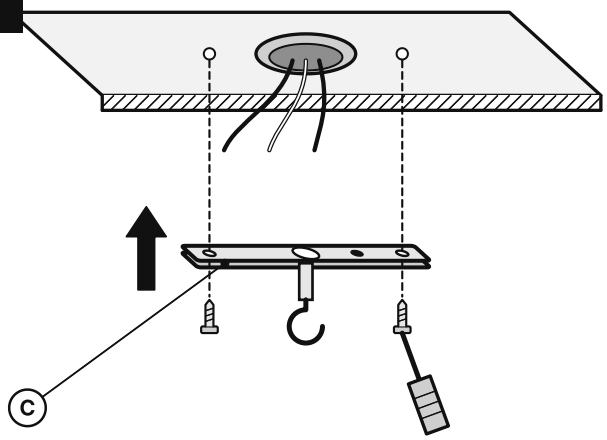

Fix the bracket and hook (C) to a ceiling box rated for the weight.

2

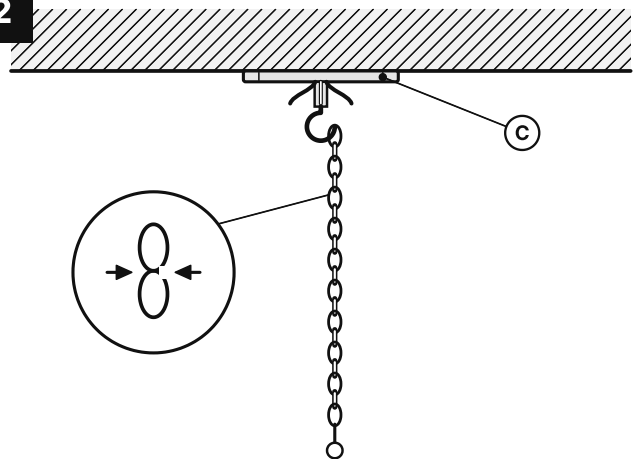


Hang the chain on the hook, set the drop and close the link.

3


House supply

- **L** **Live (hot)** black
- **N** **Neutral** white
- **G** **Ground** green or bare

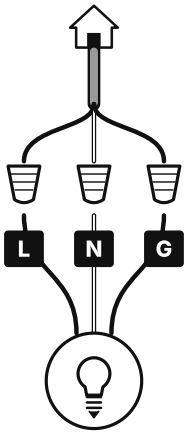


Connect the wires: L to L, N to N, G to G, with wire connectors.

4

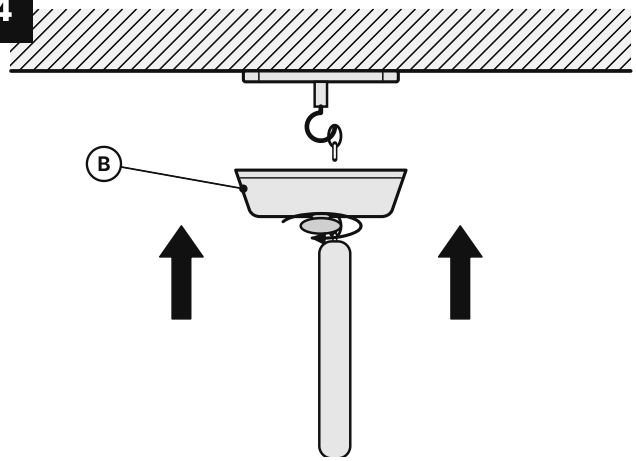

Slide the canopy (B) up and tighten it against the ceiling.


5

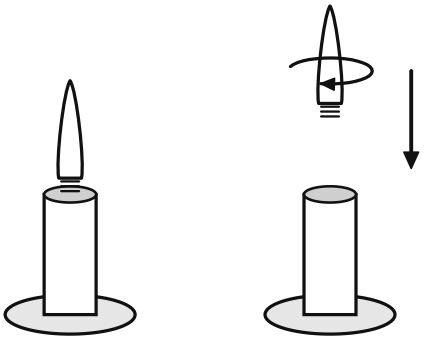

E14 bulbs, included

Fit the bulbs (D).

6

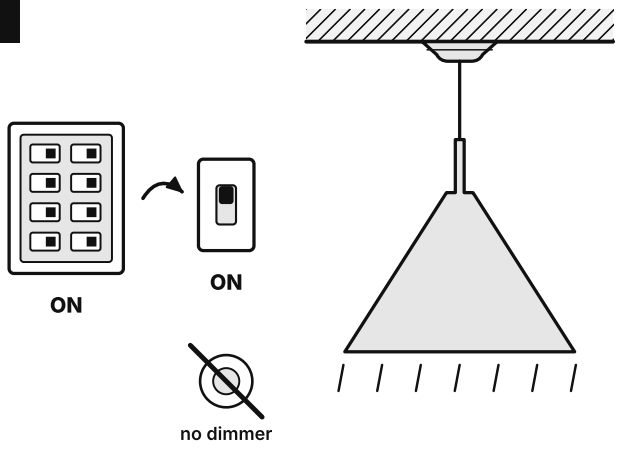

Turn the breaker on and switch on at the wall. Do not use a dimmer.

Care

- Switch the power off and let the bulbs cool.
- Dust the shades with a soft brush or a lint roller and wipe the arms with a soft, dry cloth.
- Do not wet the fabric or use polish or abrasive cleaners on the finish.

Troubleshooting

Problem	What to do
Light does not come on	Check the breaker and wall switch. Turn the power off and check each wire connection is tight.
Light flickers	Turn the power off and re-make the connections. On a dimmable model, use an LED-rated dimmer.
Fixture hangs crooked	Adjust the cord, chain or cables until it hangs level.

Need help?
Email info@norafurnish.com with your order number and a photo. A part missing or damaged? We will send a new one.

NoraFurnish