
Zephyrine

Ceiling fan

MODEL: NF-3256809830167057

DESIGN DRAWING

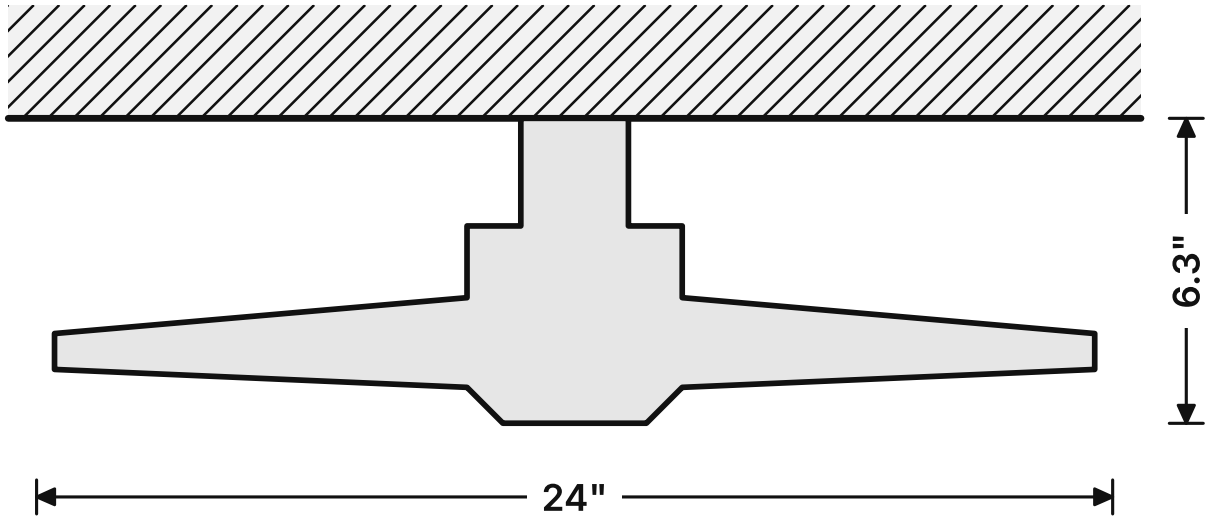

⚠ **Read all instructions before you start, and keep them for future reference.**

Installation precautions

1. Turn off the power at the breaker before you start, and check the wires are dead with a voltage tester.
2. If you are not sure how to wire it, have a licensed electrician do it. Follow local electrical codes.
3. Make sure the ceiling or wall box can carry the weight of the fixture.
4. Wear gloves so the finish stays clean.

Tools needed


Phillips screwdriver


Wire stripper



Voltage tester


Step ladder

Parts list

CHECK ALL PARTS BEFORE YOU START


A ×1

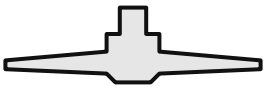
Ceiling fan with light

B ×1 set


Mounting bracket and screws

C ×1

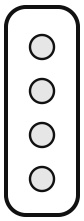

Remote control

Wiring

	Wire	House supply	Fixture
L	Live (hot)	black	black or marked wire
N	Neutral	white	white or ribbed wire
G	Ground	green or bare copper	green or green-yellow

Join each pair with wire connectors. Connect ground to the green screw on the bracket or plate if there is one.

Exploded view

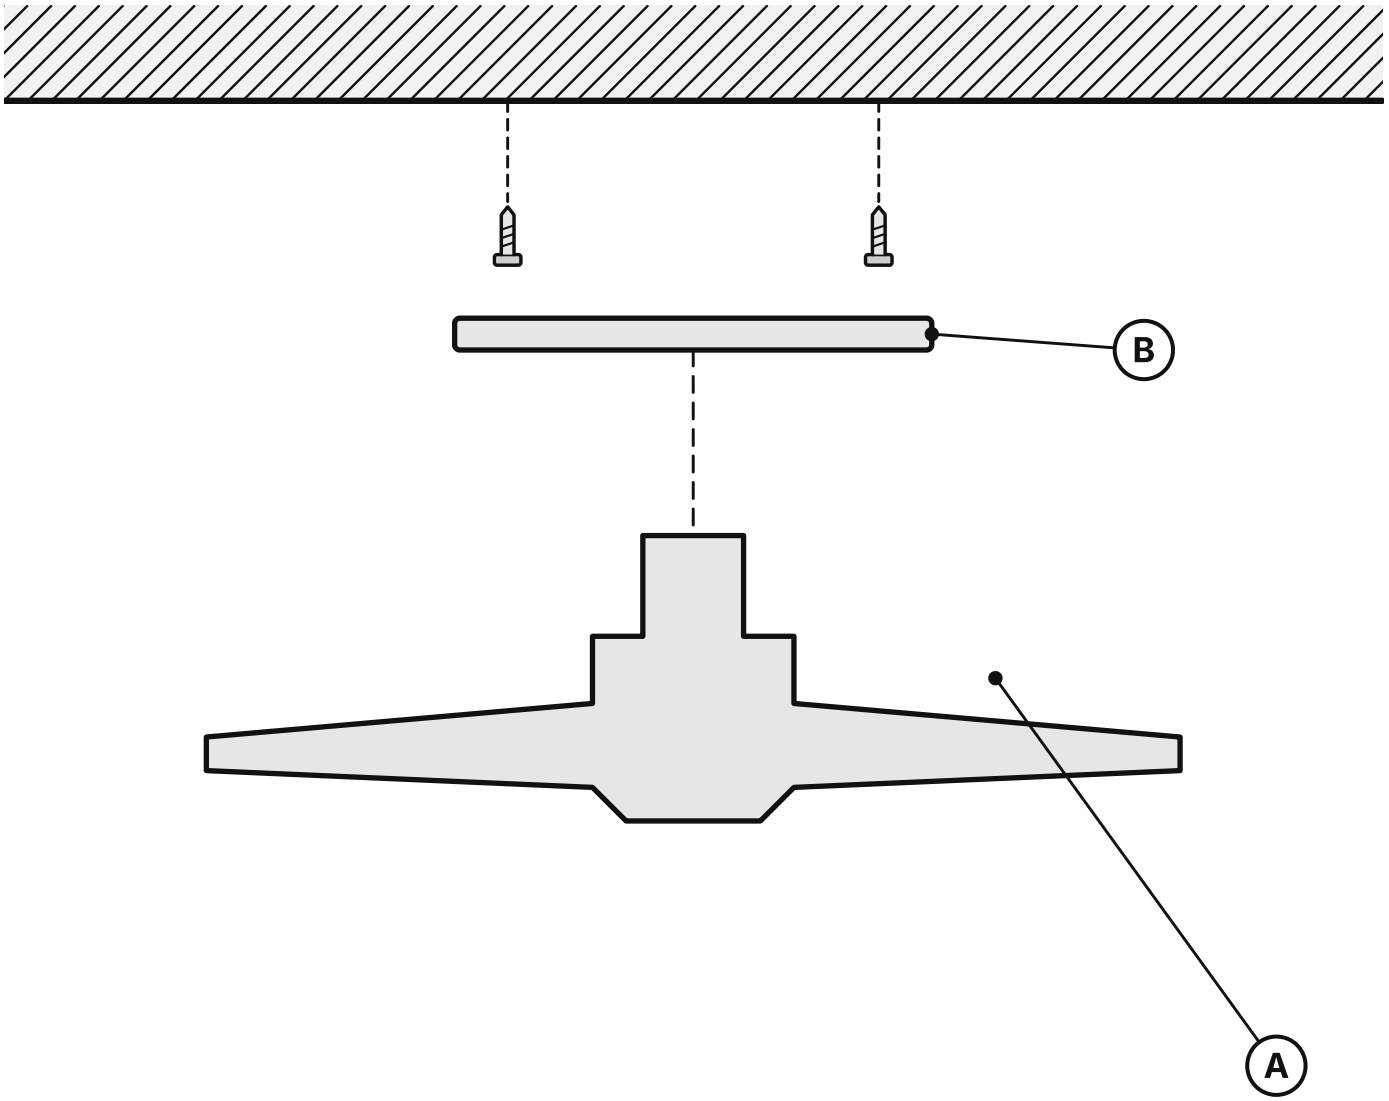

A Ceiling fan with light ×1


B Mounting bracket and screws ×1 set

C Remote control ×1

Installation


STEPS 1–5 OF 5

1

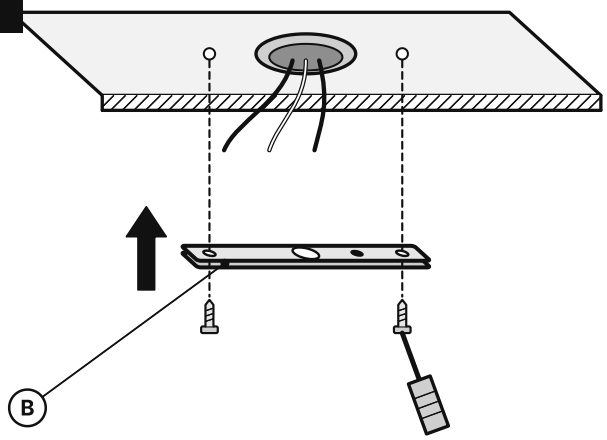

Fix the mounting bracket (B) to the ceiling box with its screws.

2

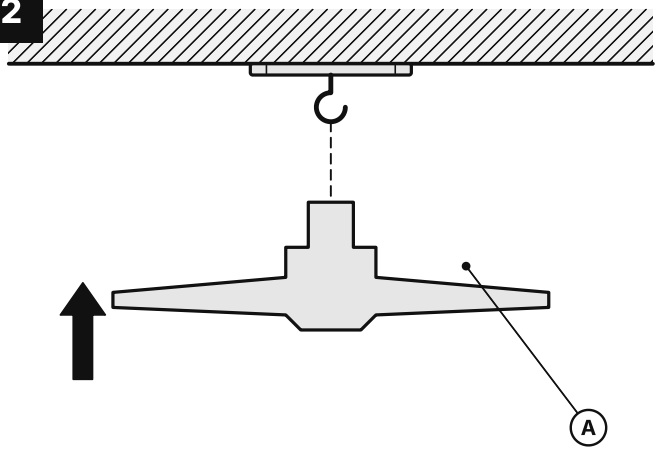


Hang the fan (A) on the bracket.

3


House supply

- **L** **Live (hot)** black
- **N** **Neutral** white
- **G** **Ground** green or bare

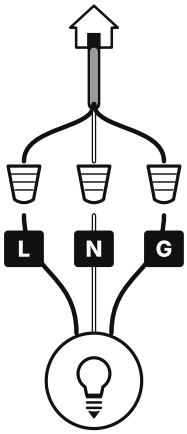


Connect the wires: L to L, N to N, G to G, with wire connectors.

4

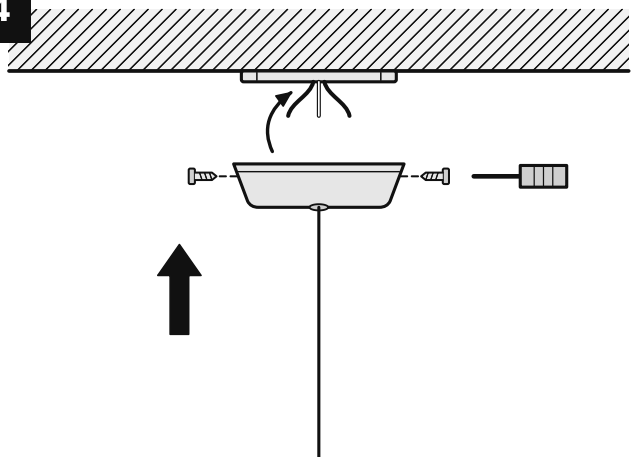

Fold the wires in and fix the canopy over the bracket.

5

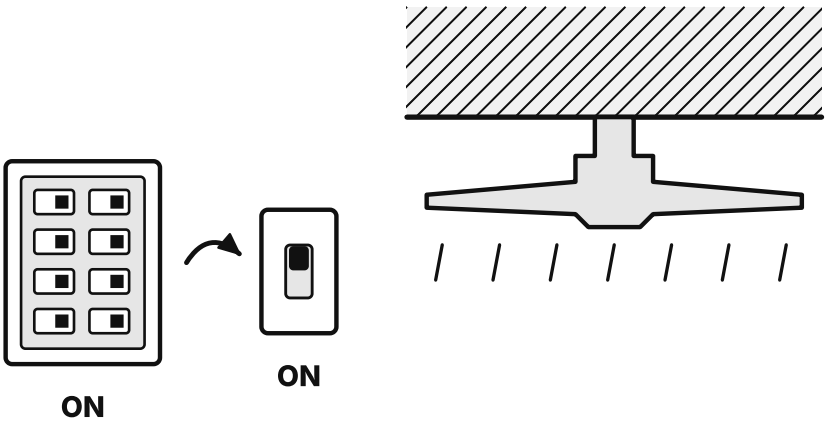

Turn the breaker on and switch on. Use the remote to control the fan and light.

Care

- Dust the ring, butterfly and blades with a soft, dry cloth.
- Do not use solvents on the acrylic.
- Switch the power off at the breaker and let the fan stop before cleaning.

Troubleshooting

Problem	What to do
Light does not come on	Check the breaker and wall switch. Turn the power off and check each wire connection is tight.
Light flickers	Turn the power off and re-make the connections. On a dimmable model, use an LED-rated dimmer.
Fixture sits crooked	Loosen the mounting screws, level the bracket and retighten.

Need help?
Email info@norafurnish.com with your order number and a photo. A part missing or damaged? We will send a new one.

NoraFurnish