
Eclissi

Ceiling light

MODEL: NF-3256805660490598

DESIGN DRAWING

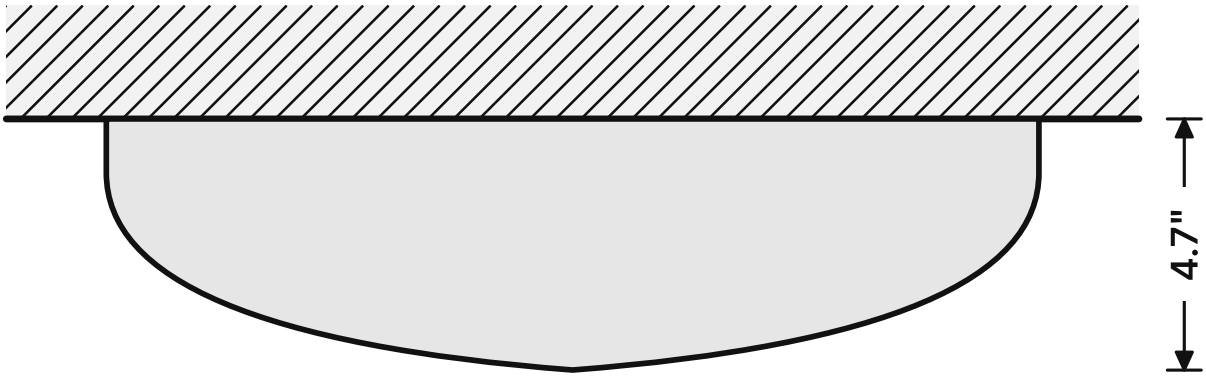

Shown: 15.7"

⚠ **Read all instructions before you start, and keep them for future reference.**

Installation precautions

1. Turn off the power at the breaker before you start, and check the wires are dead with a voltage tester.
2. If you are not sure how to wire it, have a licensed electrician do it. Follow local electrical codes.
3. Make sure the ceiling or wall box can carry the weight of the fixture.
4. Wear gloves so the finish stays clean.

Tools needed


Phillips screwdriver


Wire stripper


Voltage tester


Step ladder

Parts list

CHECK ALL PARTS BEFORE YOU START


A ×1


Ceiling light

B ×1 set


Mounting bracket and screws

C ×1



Remote control (dimming version)

Wiring

	Wire	House supply	Fixture
L	Live (hot)	black	black or marked wire
N	Neutral	white	white or ribbed wire
G	Ground	green or bare copper	green or green-yellow

Join each pair with wire connectors. Connect ground to the green screw on the bracket or plate if there is one.

Exploded view

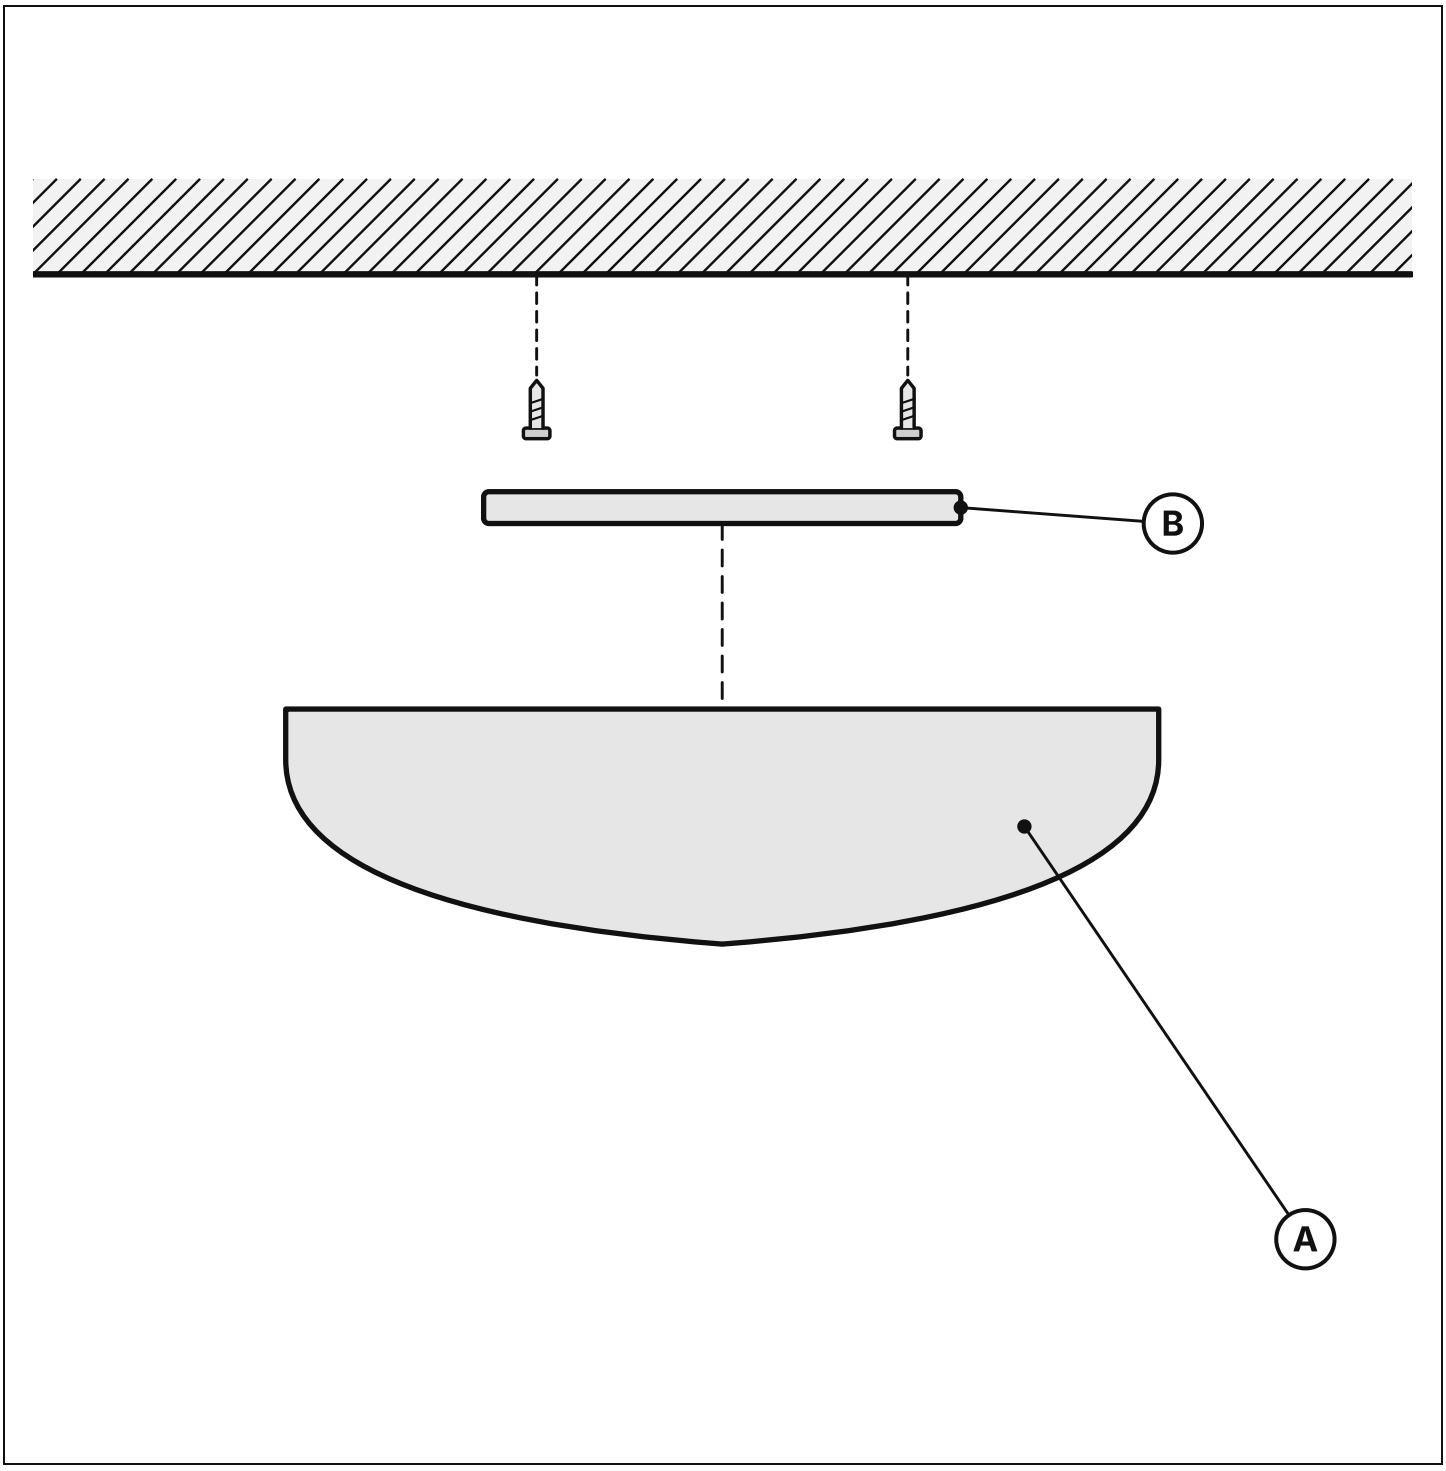

A Ceiling light ×1

B Mounting bracket and screws ×1 set


C Remote control (dimming version) ×1

Size	Depth	Height
15.7"	15.7"	4.7"
19.7"	19.7"	4.7"
23.6"	23.6"	4.7"
31.5"	31.5"	4.7"

Installation


STEPS 1–4 OF 4

1

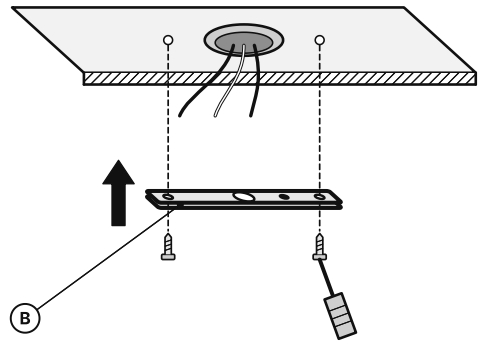


Fix the mounting bracket (B) to the ceiling box with its screws.

2

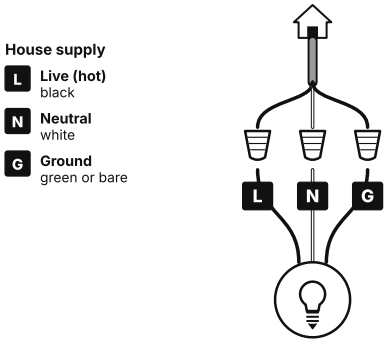


Connect the wires: L to L, N to N, G to G, with wire connectors.

3

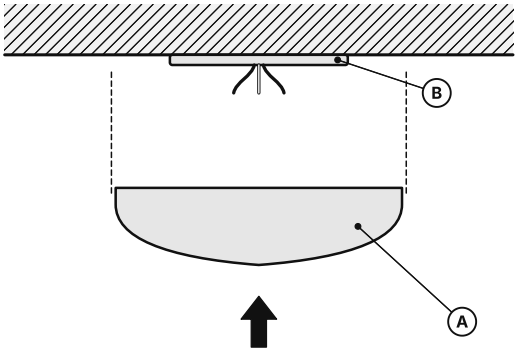

Lift the light (A) onto the bracket and secure it.

4

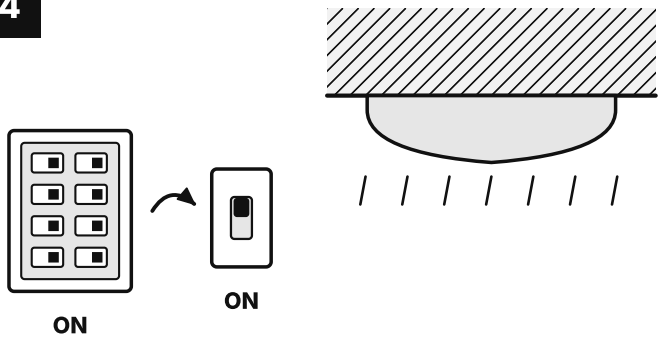

Turn the breaker on and switch on.

Care

- Switch the power off at the breaker and let the light cool.
- Dust the crystal and steel with a soft, dry cloth.
- For smudges on the mirror base, wipe with a barely damp lint-free cloth and dry it at once.

Troubleshooting

Problem	What to do
Light does not come on	Check the breaker and wall switch. Turn the power off and check each wire connection is tight.
Light flickers	Turn the power off and re-make the connections. On a dimmable model, use an LED-rated dimmer.
Fixture sits crooked	Loosen the mounting screws, level the bracket and retighten.

Need help?
Email info@norafurnish.com with your order number and a photo. A part missing or damaged? We will send a new one.

NoraFurnish