
Jay

LED Wall Art

MODEL: LI002582-0

DESIGN DRAWING

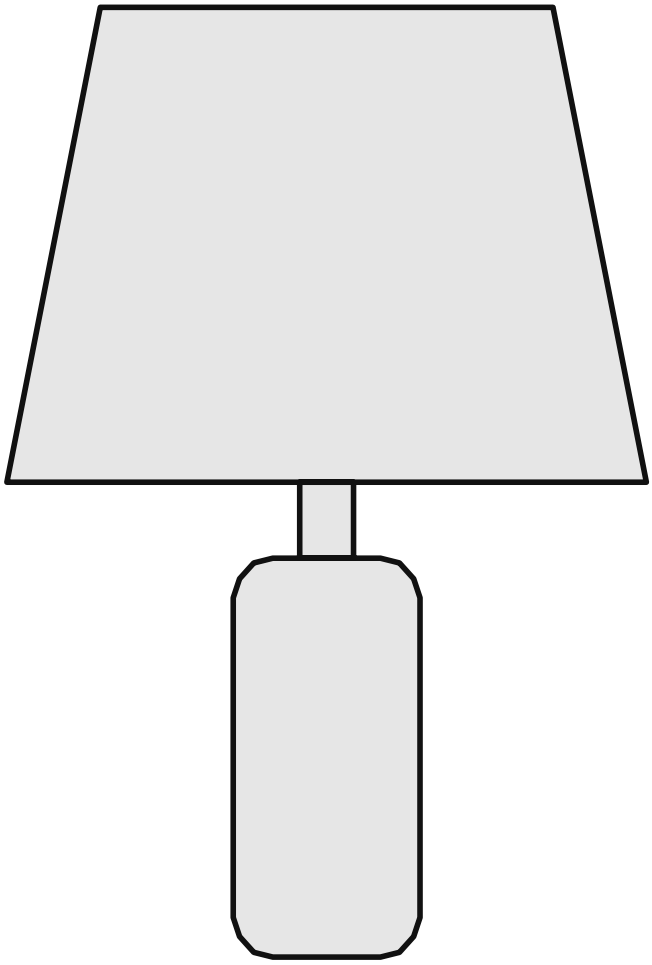

⚠ **Read all instructions before you start, and keep them for future reference.**

Mounting precautions

1. Check what is behind the wall before drilling: pipes, wires and studs.
2. Use anchors suited to your wall and to the weight of the piece.
3. Turn off the power at the breaker before you start, and check the wires are dead with a voltage tester.

Tools needed


Phillips screwdriver


Wire stripper


Voltage tester


Step ladder


Pencil



Level


Drill


Parts list

CHECK ALL PARTS BEFORE YOU START


A ×1

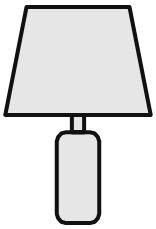
Jay

B ×1 set

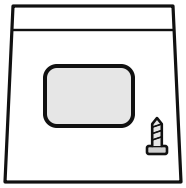
Mounting hardware


C ×1


Remote control

Mounting


STEPS 1–5 OF 5

1

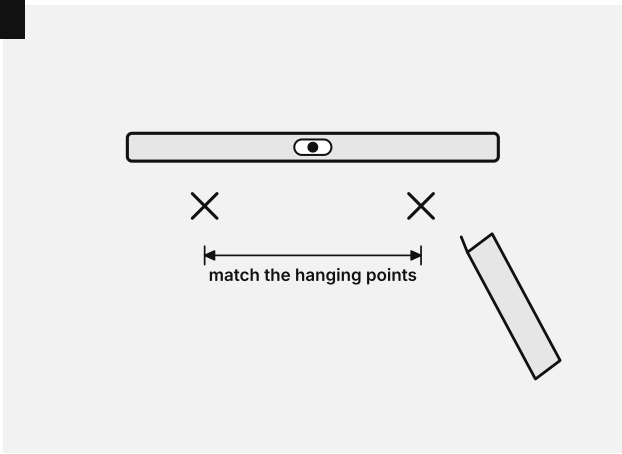


Hold the piece (A) in place, level it and mark the hanging points.

2

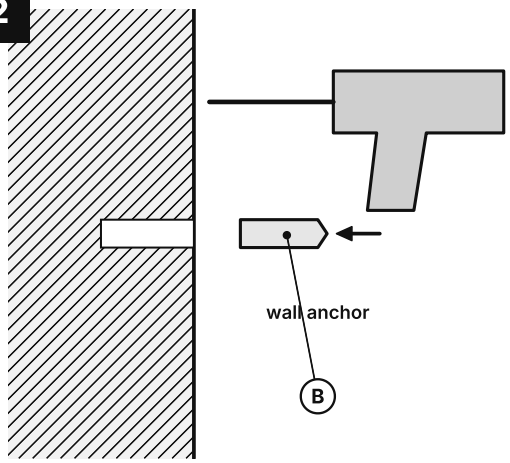


Drill the holes and push in wall anchors (B).

3

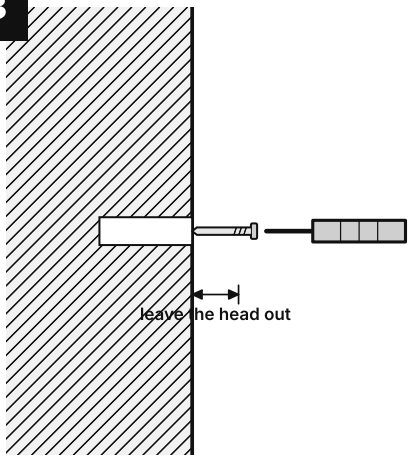

Drive the screws in, leaving the heads out slightly to hang on.

4

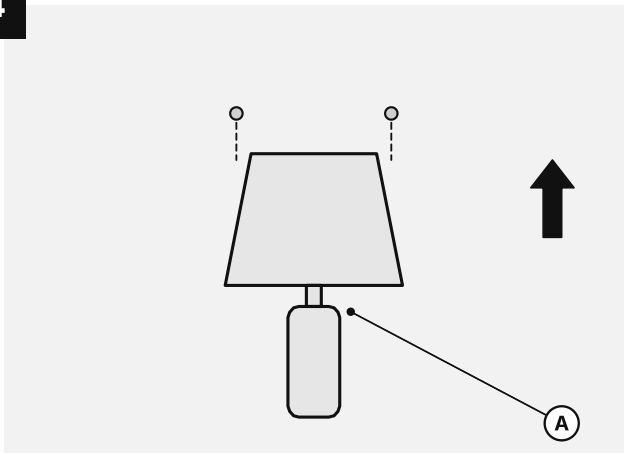


Hang the piece (A) on the screws.

5

House supply

- **L** **Live (hot)** black
- **N** **Neutral** white
- **G** **Ground** green or bare

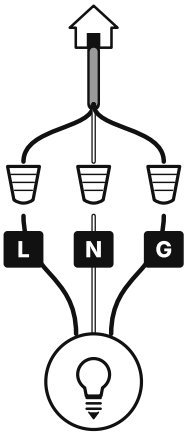

Power off first. Connect L to L, N to N, G to G.

Care

- Wipe clean with a soft, dry cloth.
- Use no abrasive cleaners on the glass body, and dry the iron and the plated bird immediately if they get damp.
- Switch the power off at the wall and let the fixture cool before you clean it.

Troubleshooting

Problem	What to do
Piece is not level	Loosen one screw slightly or add a small felt pad behind the low side.
Screw will not hold	Use a larger wall anchor, or fix into a stud.

Need help?
Email info@norafurnish.com with your order number and a photo. A part missing or damaged? We will send a new one.

NoraFurnish