
Creta Wall Clock

Wall Clocks

MODEL: NF-BK-10056362328378-1

DESIGN DRAWING

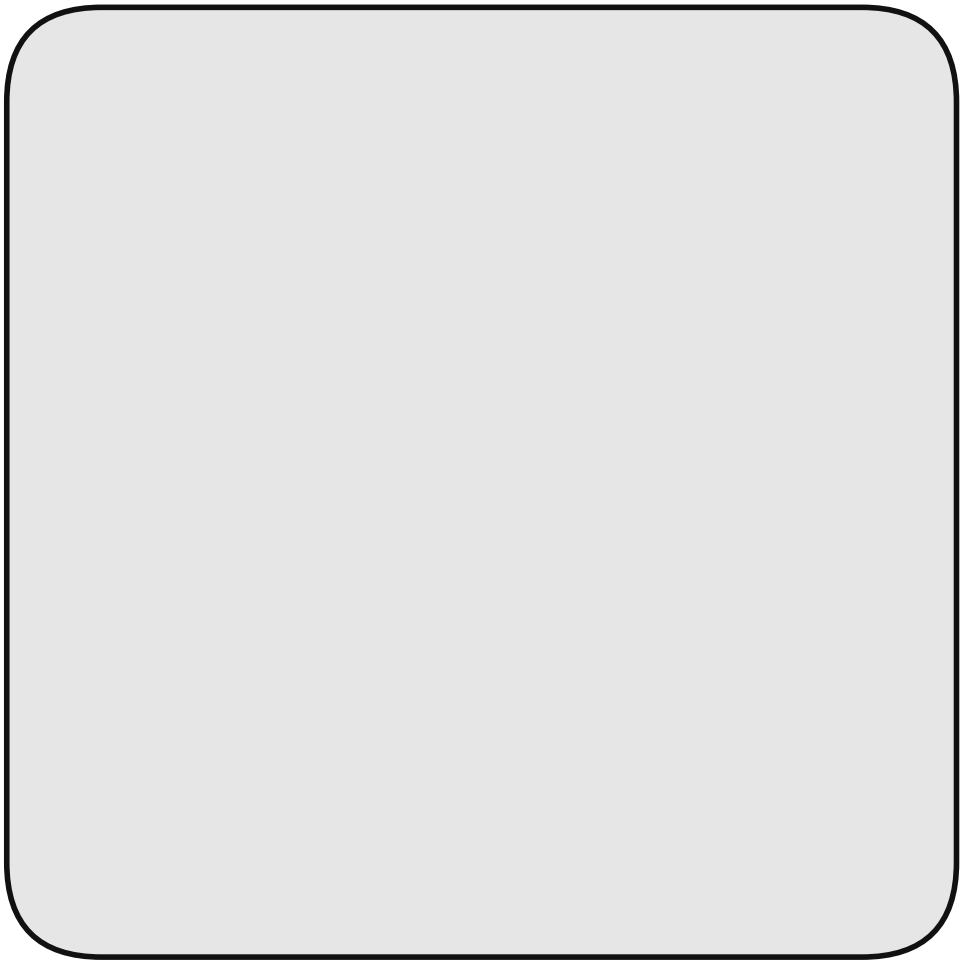

⚠ **Read all instructions before you start, and keep them for future reference.**


Mounting precautions

1. Check what is behind the wall before drilling: pipes, wires and studs.
2. Use anchors suited to your wall and to the weight of the piece.

Tools needed


Pencil


Level



Drill


Phillips screwdriver


Parts list

CHECK ALL PARTS BEFORE YOU START

A ×1

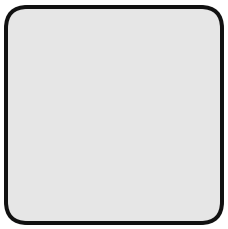
Creta Wall Clock

B ×1 set

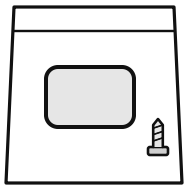
Mounting hardware


Power

Runs on batteries, not included.

Mounting


STEPS 1–5 OF 5

1

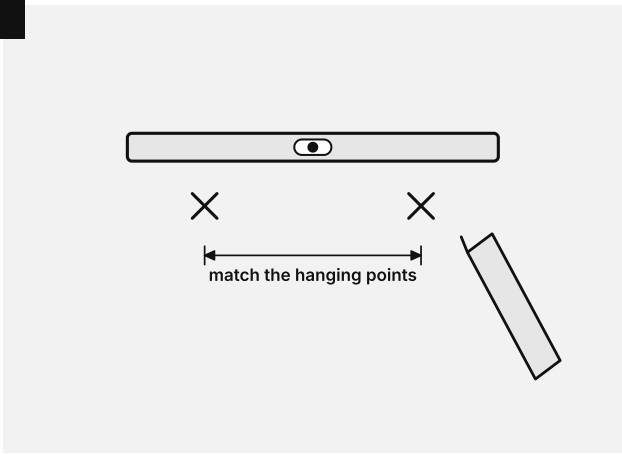


Hold the piece (A) in place, level it and mark the hanging points.

2

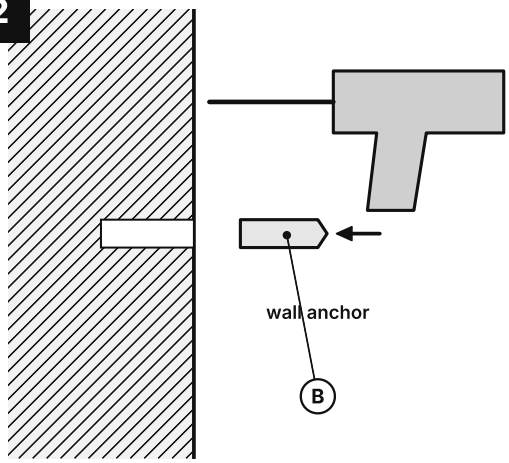


Drill the holes and push in wall anchors (B).

3

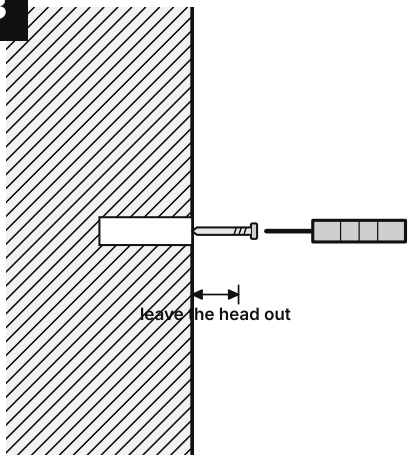


Drive the screws in, leaving the heads out slightly to hang on.

4

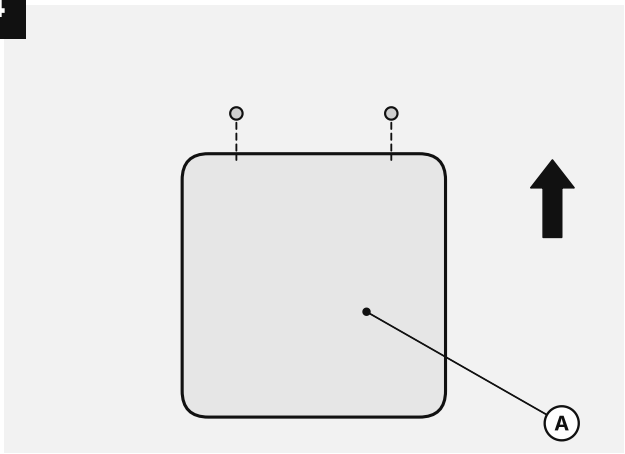

Hang the piece (A) on the screws.

5

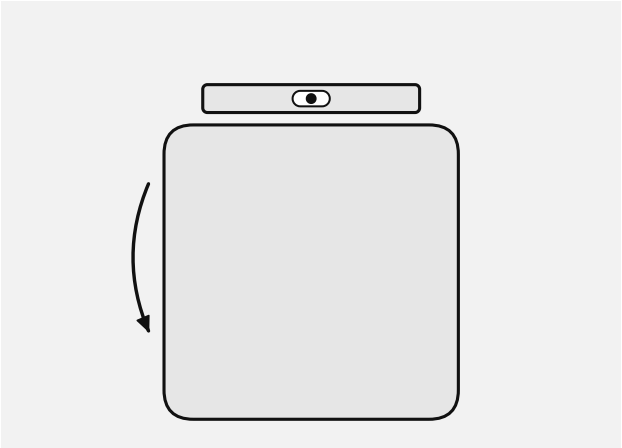

Check it is level.

Care

- Wipe clean with a soft, dry cloth.
- Avoid water and abrasive cleaners on the matte finish.

Troubleshooting

Problem	What to do
Piece is not level	Loosen one screw slightly or add a small felt pad behind the low side.
Screw will not hold	Use a larger wall anchor, or fix into a stud.

Need help?
Email info@norafurnish.com with your order number and a photo. A part missing or damaged? We will send a new one.

NoraFurnish