
# Cerchio Wall Clock

Wall Clocks

**MODEL: NF-1PCWOOR-0**

**DESIGN DRAWING**

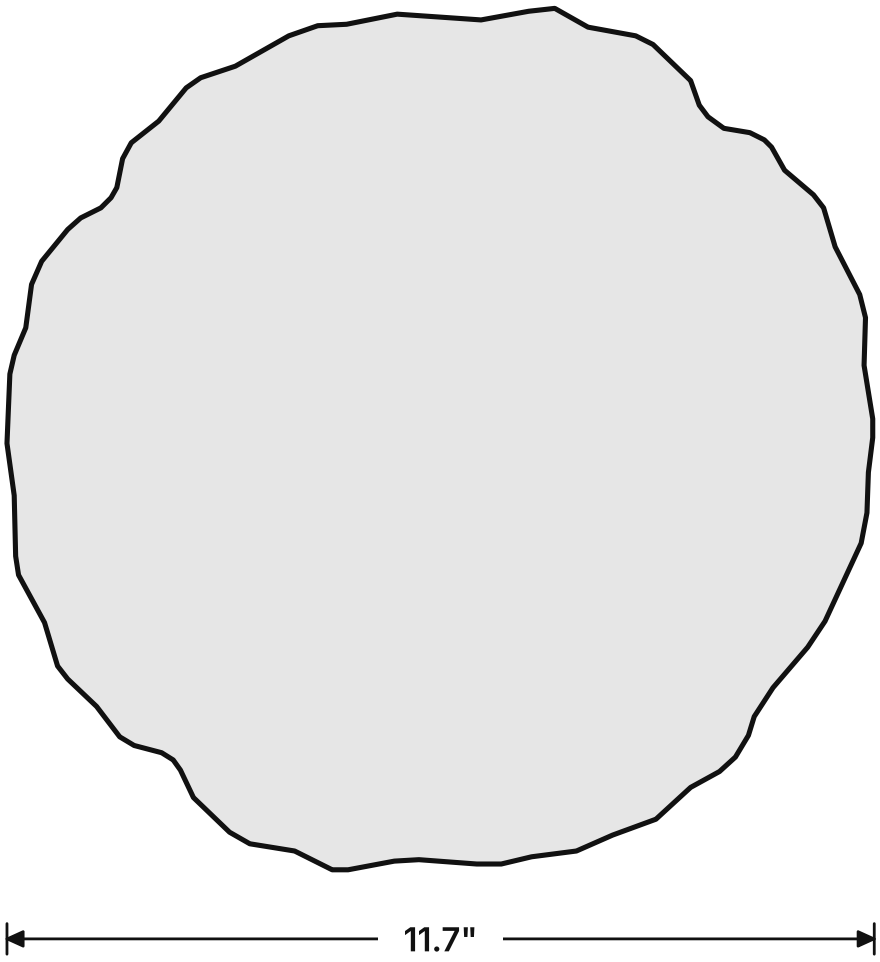


Shown: 12"

⚠ **Read all instructions before you start, and keep them for future reference.**

**Mounting precautions**

1. Check what is behind the wall before drilling: pipes, wires and studs.
2. Use anchors suited to your wall and to the weight of the piece.


## Tools needed



Pencil



Level



Drill




Phillips screwdriver

## Parts list

CHECK ALL PARTS BEFORE YOU START

**A** ×1

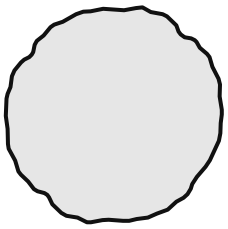


Cerchio Wall Clock

## Mounting


STEPS 1–5 OF 5

**1**

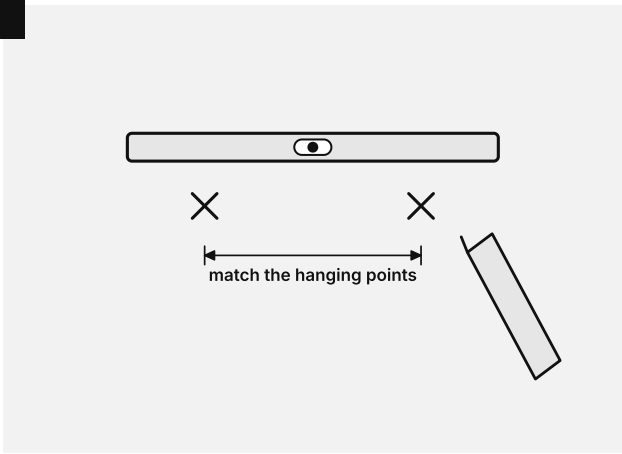



Hold the piece (A) in place, level it and mark the hanging points.

**2**

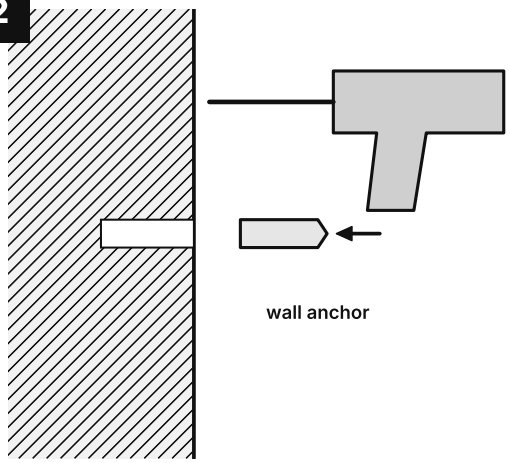



Drill the holes and push in wall anchors.

**3**

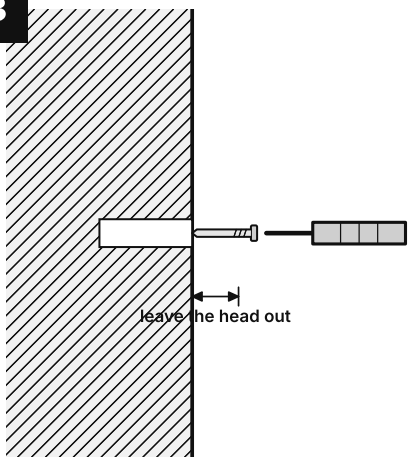



Drive the screws in, leaving the heads out slightly to hang on.

**4**

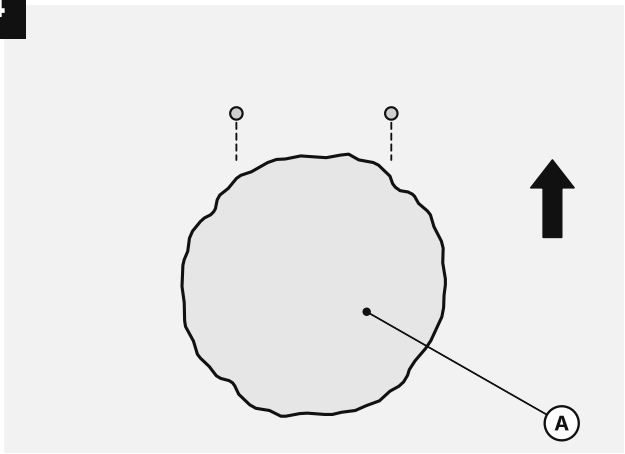


Hang the piece (A) on the screws.

**5**

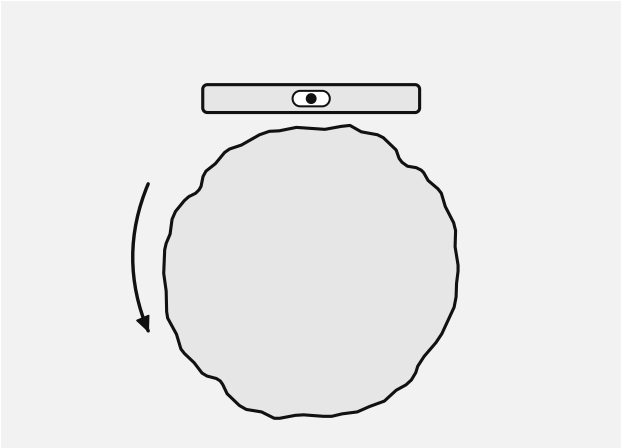

Check it is level.

## Care

- Wipe clean with a soft, dry cloth.
- Keep away from prolonged moisture.

## Troubleshooting

| Problem | What to do |
|---|---|
| **Piece is not level** | Loosen one screw slightly or add a small felt pad behind the low side. |
| **Screw will not hold** | Use a larger wall anchor, or fix into a stud. |

**Need help?**
Email info@norafurnish.com with your order number and a photo. A part missing or damaged? We will send a new one.

NoraFurnish